

เตาไมโครเวฟ

คำแนะนำสำหรับผู้ใช้และคู่มือการอบอาหาร

**Planet
First** **100%
Recycled Paper**

คู่มือนี้พิมพ์จากกระดาษรีไซเคิล 100%

imagine the possibilities

ขอขอบคุณที่เลือกซื้อผลิตภัณฑ์ Samsung โปรดลงทะเบียนผลิตภัณฑ์ที่

www.samsung.com/register

SAMSUNG



สารบัญ

คู่มือค้นหาอย่างรวดเร็ว	2
เตาอบ	3
แผงควบคุม	4
อุปกรณ์เสริม	4
การใช้คู่มือฉบับนี้	5
ข้อมูลสำคัญเพื่อความปลอดภัย	5
คำอธิบายสัญลักษณ์และไอคอน	5
ข้อควรระวังเพื่อหลีกเลี่ยงการได้รับพลังงานไมโครเวฟมากเกินไป	5
คำแนะนำสำคัญเพื่อความปลอดภัย	6
การติดตั้งเตาไมโครเวฟ	9
การตั้งเวลา	9
ควรทำอย่างไรเมื่อเกิดข้อสงสัยหรือมีปัญหา	10
การอบ/อุ่นอาหาร	10
ระดับพลังงาน	11
การหยุดการอบอาหาร	11
การปรับเวลาอบอาหาร	11
การใช้คุณสมบัติระบบกำจัดกลิ่น	11
การใช้ระบบทำความสะอาดด้วยไอน้ำ	12
การใช้คุณสมบัติอาหารจานด่วน	12
การตั้งค่าอาหารจานด่วน	12
การใช้คุณสมบัติเมนูไทย	13
การตั้งค่าเมนูไทย	13
การใช้คุณสมบัติละลายน้ำแข็งอัตโนมัติ	15
การตั้งค่าการละลายน้ำแข็งอัตโนมัติ	15
การเลือกตำแหน่งของชดสวดความร้อน	16
การเลือกอุปกรณ์เสริม	16
การย่าง	16
การใช้ไมโครเวฟผสมการย่าง	17
การปิดเสียงเตือน	17
คู่มือสำหรับอุปกรณ์การทำอาหาร	18
คู่มือการอบอาหาร	20
การทำความสะอาดเตาอบไมโครเวฟของคุณ	27
การเก็บรักษาและซ่อมเตาไมโครเวฟ	27
ข้อมูลจำเพาะด้านเทคนิค	28

คู่มือค้นหาอย่างรวดเร็ว

ถ้าคุณต้องการอบอาหาร

1. วางอาหารในเตาอบ
เลือกระดับพลังงานโดยกดปุ่ม หนึ่งครั้งหรือตามจำนวนที่เหมาะสม

ไมโครเวฟ
Microwave

2. กำหนดเวลาในการอบอาหาร โดยกดปุ่ม และ ตามต้องการ

3. กดปุ่ม

ผลลัพธ์:

การอบจะเริ่มขึ้น เตาอบจะส่งสัญญาณเสียงครั้งเมื่ออบอาหารเสร็จ

เริ่มต้น / + 30 วินาที
Start / +30 sec

ถ้าคุณต้องการละลายน้ำแข็งอย่างรวดเร็วสำหรับอาหารโดยอัตโนมัติ

1. วางอาหารแช่แข็งในเตาอบ
เลือกประเภทอาหารที่คุณอบโดยกดปุ่ม **ละลายน้ำแข็งอย่างรวดเร็ว** () หนึ่งครั้งหรือตามจำนวนที่เหมาะสม

**** ละลายน้ำแข็ง**
 Defrost

2. เลือกน้ำหนักอาหาร โดยกดปุ่ม และ

3. กดปุ่ม

เริ่มต้น / + 30 วินาที
Start / +30 sec

ถ้าคุณต้องการเพิ่มเวลาอีก 30 วินาที

วางอาหารเอาไว้ในเตาอบ
แล้วกดปุ่ม **+30 วินาที** หนึ่งครั้งหรือตามจำนวนที่เหมาะสมเพื่อเพิ่มอีกครั้งละ 30 วินาทีตามที่คุณต้องการ

เริ่มต้น / + 30 วินาที
Start / +30 sec



ถ้าคุณต้องการย่างอาหาร


1. กดปุ่ม 

ย่าง
Grill


2. กำหนดเวลาในการอบอาหารโดยกดปุ่ม (—) และ (+)

— +

3. กดปุ่ม 

 เริ่มต้น /+ 30 วินาที
Start / +30 sec

เตาอบ

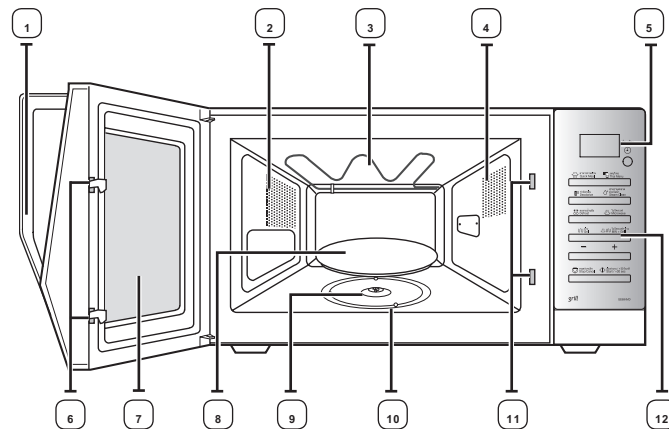

1. ที่จับประตู

2. ช่องระบายอากาศ

3. ย่าง

4. ไฟ

5. จอแสดงผล

6. สลักประตู

7. ประตู

8. จานหมุน


9. เฟืองของจานหมุน

10. วงแหวน

11. ช่องล็อกเพื่อความปลอดภัย

12. แผงควบคุม

แผงควบคุม

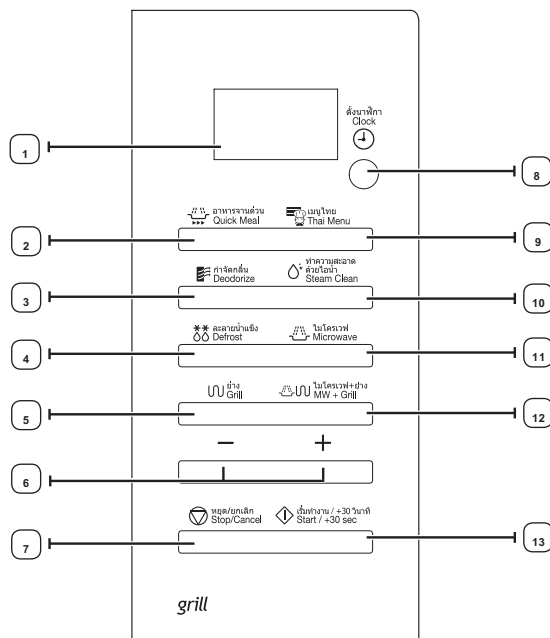

1. จอแสดงผล
2. ปุ่มอาหารจานด่วนอัตโนมัติ
3. ปุ่มกำจัดกลิ่น
4. ปุ่มละลายน้ำแข็งอัตโนมัติ
5. การเลือกโหมดย่าง
6. ปุ่มขึ้น (+) / ลง (-)
(เวลาอบอาหาร น้ำหนัก และปริมาณ)
7. ปุ่มหยุด/ยกเลิก
8. การตั้งนาฬิกา
9. ปุ่มเมนูไทย
10. ปุ่มทำความสะอาดด้วยไอน้ำ
11. ปุ่มไมโครเวฟ
12. การเลือกโหมดผสม
13. ปุ่มเริ่มทำงาน +30 วินาที

อุปกรณ์เสริม

คุณจะได้รับอุปกรณ์เสริมหลายชนิด เพื่อนำมาใช้ร่วมกับเตาอบ โดยขึ้นอยู่กับรุ่นที่คุณซื้อ

 
1. เฟืองของจานหมุน ซึ่งวางไว้ตรงกับแกนของมอเตอร์ที่ส่วนฐานของเตาอบ

วัตถุประสงค์: เฟืองนี้จะเป็นตัวหมุนจานหมุน




2. วงแหวน เพื่อวางไว้บริเวณส่วนกลางของเตาอบ

วัตถุประสงค์: วงแหวนนี้จะรองรับน้ำหนักของจานหมุน




3. จานหมุน วางเหนือวงแหวน โดยให้ส่วนกลางสวมพอดีกับเฟือง

 วัตถุประสงค์: จานหมุนทำหน้าที่เป็นพื้นที่หลักสำหรับอบอาหาร และสามารถถอดออกทำความสะอาดได้ง่าย




4. ตะแกรงโลหะ สำหรับวางบนจานหมุน

 วัตถุประสงค์: ตะแกรงโลหะสามารถใช้ได้ในการย่างและการอบอาหารแบบผสม



5. ถ้วยน้ำสะอาด โปรดดูหน้า 12

 วัตถุประสงค์: ถ้วยน้ำสามารถใช้ในการทำ ความสะอาด



ห้ามใช้เตาไมโครเวฟหากไม่มีวงแหวนหรือจานหมุน

การใช้คู่มือฉบับนี้

ขอขอบคุณที่เลือกใช้เตาไมโครเวฟ SAMSUNG คำแนะนำสำหรับผู้ใช้นี้ประกอบด้วยข้อมูลที่เป็นประโยชน์มากมายเกี่ยวกับความปลอดภัยอาหารด้วยเตาไมโครเวฟของคุณ ดังนี้

- ข้อควรระวังเพื่อความปลอดภัย
- อุปกรณ์เสริมและภาชนะที่เหมาะสม
- เคล็ดลับในการอบอาหารที่มีประโยชน์
- เคล็ดลับในการอบอาหาร

ข้อมูลสำคัญเพื่อความปลอดภัย

คำแนะนำสำคัญเพื่อความปลอดภัย

โปรดอ่านให้ละเอียด และเก็บไว้เป็นข้อมูลอ้างอิงในอนาคต

ก่อนที่จะใช้เตาอบ โปรดปฏิบัติตามคำแนะนำต่อไปนี้

- ใช้อุปกรณ์เพื่อวัตถุประสงค์ที่อธิบายในคู่มือคำแนะนำนี้เท่านั้น คำเตือนและคำแนะนำเพื่อความปลอดภัยในคู่มือนี้ไม่ได้ครอบคลุมถึงสภาวะและสถานการณ์ทั้งหมดที่สามารถเกิดขึ้นได้ คุณมีหน้าที่จะต้องใช้สามัญสำนึก ความระมัดระวัง และใส่ใจกับการติดตั้ง บำรุงรักษา และใช้งานอุปกรณ์
- เนื่องจากคำแนะนำในการใช้งานต่อไปนี้ใช้สำหรับหลายรุ่น ลักษณะของเตาอบของคุณอาจแตกต่างจากที่อธิบายในคู่มือนี้ และสัญญาณคำเตือนบางอย่างอาจไม่มีผล ถ้าคุณมีข้อซักถามหรือข้อกังวลใด โปรดติดต่อศูนย์บริการที่ใกล้ที่สุด หรือหาความช่วยเหลือและข้อมูลออนไลน์ได้ที่ www.samsung.com
- เตาไมโครเวฟนี้ใช้สำหรับการให้ความร้อนกับอาหาร ใช้สำหรับการใช้งานภายในครัวเรือนเท่านั้น ห้ามอุ่นผ้าทุกประเภทหรือเบาะที่มีไส้ซึ่งอาจลุกไหม้ได้ ผู้ผลิตไม่มีส่วนรับผิดชอบความเสียหายที่เกิดจากการใช้อุปกรณ์อย่างไม่ถูกต้องหรือไม่เหมาะสม
- การไม่รักษาความสะอาดเตาอบอาจทำให้เกิดความเสียหายกับพื้นผิว ซึ่งอาจมีผลเสียต่อเตาอบอย่างมาก และอาจก่อให้เกิดอันตรายได้

คำอธิบายสัญลักษณ์และไอคอน



คำเตือน

อันตรายหรือการกระทำที่ไม่ปลอดภัยที่อาจทำให้เกิด การบาดเจ็บสาหัสหรือเสียชีวิต



ข้อควรระวัง

อันตรายหรือการกระทำที่ไม่ปลอดภัยที่อาจทำให้เกิด การบาดเจ็บเล็กน้อยหรือทำให้ สิ่งของเสียหาย



คำเตือน อันตรายจากไฟ



คำเตือน พื้นผิวร้อน



คำเตือน ไฟฟ้า



คำเตือน วัตถุที่ระเบิดได้



ห้ามทำ



ทำตามคำแนะนำอย่างเคร่งครัด



ห้ามกดประกอบ



ถอดปลั๊กออกจากเต้าเสียบที่ผนัง



ห้ามสัมผัส



ตรวจสอบว่าเครื่องมีการลงกราวด์เพื่อป้องกัน ไฟฟ้าดูด



ติดต่อศูนย์บริการเพื่อขอรับความช่วยเหลือ



หมายเหตุ



ข้อมูลสำคัญ

ข้อควรระวังเพื่อหลีกเลี่ยงการได้รับพลังงานไมโครเวฟมากเกินไป

หากไม่ปฏิบัติตามข้อควรระวังเพื่อความปลอดภัยต่อไปนี้ อาจทำให้ได้รับพลังงานไมโครเวฟที่เป็นอันตราย

- ห้ามใช้เตาอบอาหารขณะที่เปิดประตู หรือแก้ไขตัวแปลงสวิตช์เพื่อความปลอดภัย (สลักประตู) หรือ สอดสิ่งใดลงในช่องของล็อก ไม่ว่าในกรณีใดๆ
- ห้ามสอดวัตถุใดๆ ระหว่างประตูของเตาอบกับด้านหน้า หรือปล่อยให้มือหรืออาหารหรือสารทำความสะอาด ค้างอยู่ที่ผิวหน้าของซिल ตรวจสอบว่าประตูและซिलขอบประตูสะอาดอยู่เสมอมือ โดยเช็ดด้วยผ้าหมาดและ เช็ดอีกครั้งด้วยผ้าแห้งที่แห้งหลังจากการใช้งาน
- ห้ามใช้เตาอบที่มีความเสียหาย จนกว่าจะได้รับการซ่อมแซมโดยช่างผู้ชำนาญการซ่อมบำรุงไมโครเวฟที่ผ่านการฝึกอบรมโดยผู้ผลิต โปรดปิดประตูของเตาอบให้สนิท และตรวจสอบว่าส่วนต่างๆ ต่อไปนี้ไม่ชำรุดเสียหาย:
 - (1) ประตู (จอ)
 - (2) บานพับของประตู (หักหรือหลวม)
 - (3) ซิลประตูและผิวหน้าของซिल
- ห้ามปรับแก้หรือซ่อมบำรุงเตาอบโดยบุคคลอื่นที่ไม่ใช่ช่างซ่อมบำรุงไมโครเวฟที่มีความชำนาญและได้รับการฝึกอบรมโดยผู้ผลิต



ผลิตภัณฑ์ที่เป็นอุปกรณ์ Group 2 Class B ISM คำนิยามของ Group 2 ซึ่งมีอุปกรณ์ ISM ทั้งหมด ซึ่งมีพลังงาน ความถี่วิทยุที่สร้างขึ้นและ/หรือใช้ในรูปของรังสีแม่เหล็กไฟฟ้า สำหรับการใช้กับวัสดุ และอุปกรณ์ EDM และอุปกรณ์ เชื่อมโลหะ สำหรับอุปกรณ์ Class B คืออุปกรณ์ที่เหมาะสมสำหรับการใช้งานในสถานที่ที่อาศัย และในสถานที่ซึ่งเชื่อมต่อกับเครือข่ายพลังงานแรงดันไฟฟ้าต่ำ ซึ่งจ่ายให้กับอาคารปลุกสร้างสำหรับการใช้งานในครัวเรือน

คำแนะนำสำคัญเพื่อความปลอดภัย

โปรดปฏิบัติตามข้อควรระวังเพื่อความปลอดภัยตลอดเวลา

คำเตือน					
	ควรให้เจ้าหน้าที่ที่มีความชำนาญเท่านั้นเป็นผู้แก้ไขหรือซ่อมแซมเตาไมโครเวฟ	✓	✓	✓	✓
	ห้ามให้ความร้อนของเหลวหรืออาหารอื่นในภาชนะที่ปิดผนึกแน่น	✓	✓	✓	✓
	เพื่อความปลอดภัย ห้ามใช้เครื่องทำความสะอาด้วยแรงดันน้ำหรือเครื่องทำความสะอาด้วยเครื่องฉีดไอน้ำ	✓	✓	✓	✓
	ห้ามติดตั้งอุปกรณ์ใกล้เครื่องทำความร้อน วัตถุไวไฟ ความชื้น ตำแหน่งที่มีน้ำมันหรือฝุ่นละอองมาก ในตำแหน่งที่ได้รับแสงแดดโดยตรงหรือได้รับน้ำ หรือในที่ซึ่งอาจมีก๊าซรั่วหรือบนพื้นที่ไม่เรียบ	✓	✓	✓	✓
	อุปกรณ์นี้ต้องมีการลงกราวด์อย่างเหมาะสมตามข้อกำหนดของท้องถิ่นหรือของประเทศ	✓	✓	✓	✓
	นำสิ่งแปลกปลอมทั้งหมด เช่น ฝุ่นละอองหรือน้ำออกจากบริเวณปลั๊กไฟและหน้าสัมผัสเป็นประจำ โดยใช้ผ้าแห้ง	✓	✓	✓	✓
	ห้ามดึงหรือบิดงอหรือวางสิ่งของทับสายไฟ	✓	✓	✓	✓
	ถ้ามีก๊าซรั่ว (เช่น ก๊าซโพรเพน ก๊าซหุงต้ม ฯลฯ) ให้ระบายอากาศทันที โดยไม่สัมผัสกับปลั๊กไฟ	✓	✓	✓	✓
	ห้ามสัมผัสปลั๊กไฟด้วยมือที่เปียก	✓	✓	✓	✓
	ห้ามปิดเครื่องด้วยการถอดปลั๊กไฟ ขณะที่เครื่องกำลังทำงานอยู่	✓	✓	✓	✓

	ห้ามสอดนิ้วหรือสิ่งแปลกปลอม ถ้ามีสิ่งแปลกปลอมหรือน้ำเข้าเครื่อง ให้ถอดปลั๊กไฟและติดต่อศูนย์บริการที่อยู่ใกล้ที่สุด	✓	✓	✓	✓
	ห้ามใช้แรงกดหรือกระแทกอุปกรณ์	✓	✓	✓	✓
	อย่าวางอุปกรณ์ไว้ในวัตถุที่เปราะบางเช่นเซรามิกหรือกระจก (รุ่นสำหรับวางบนเตาไมโครเวฟเท่านั้น)	✓	✓		
	ห้ามใช้เบนซิน ทินเนอร์ แอลกอฮอล์ เครื่องทำความสะอาดด้วยไอน้ำหรือเครื่องฉีดน้ำแรงดันสูงเพื่อทำความสะอาดอุปกรณ์	✓	✓	✓	✓
	ตรวจสอบว่าแรงดันไฟฟ้า ความถี่ และกระแสไฟฟ้าตรงกับข้อมูลจำเพาะของผลิตภัณฑ์	✓	✓		✓
	ต่อสายไฟเข้ากับเต้ารับไฟฟ้าที่มั่นคงอย่างแน่นหนา ห้ามใช้ตัวแปลงปลั๊ก สายต่อ หรือหม้อแปลงไฟฟ้า	✓	✓	✓	
	ห้ามเกี่ยวสายไฟกับวัตถุที่เป็นโลหะ ใส่สายไฟไว้ระหว่างวัตถุหรือหลังเตาอบ	✓	✓	✓	
	ห้ามใช้ปลั๊กไฟที่เสียหาย สายไฟ หรือเต้ารับไฟฟ้าที่เสียหาย หลวม เมื่อปลั๊กไฟหรือสายไฟเสียหาย โปรดติดต่อศูนย์บริการใกล้บ้านคุณ	✓	✓	✓	✓
	อุปกรณ์นี้ไม่ได้ออกแบบมาเพื่อใช้งานด้วยเครื่องจับเวลาภายนอกหรือระบบรีโมทคอนโทรลแยกต่างหาก	✓	✓		
	ห้ามฉีดพ่นน้ำมันเตาอบ	✓	✓		
	ห้ามวางสิ่งของบนเตาอบ ภายในหรือบนประตูเตาอบ	✓	✓	✓	
	ห้ามพันสายระเหยเช่นยาฆ่าแมลงบนพื้นผิวผลิตภัณฑ์โดยตรง	✓	✓		
	โปรดดูแลมิให้เด็กเล่นกับอุปกรณ์นี้	✓	✓	✓	✓
	อุปกรณ์นี้ไม่ได้ออกแบบมาสำหรับการติดตั้งในยานพาหนะบนท้องถนน คาราแวน และยานพาหนะในลักษณะเดียวกัน	✓	✓	✓	✓



<input type="checkbox"/>	โปรดอย่าเก็บวัสดุที่ตัดไฟได้ในเตาอบ ใช้ความระมัดระวังเมื่อให้ความร้อนอาหารหรือเครื่องดื่มที่มีแอลกอฮอล์ เนื่องจากไอของแอลกอฮอล์อาจสัมผัสกับส่วนที่ร้อนจัดของเตาอบ	✓	✓	✓
<input type="checkbox"/>	เตาไมโครเวฟนี้ออกแบบมาสำหรับใช้งานบนเคาน์เตอร์เท่านั้น ไม่ควรวางเตาไมโครเวฟไว้ในช่องของตู้ (รุ่นสำหรับวางบนเคาน์เตอร์เท่านั้น)	✓	✓	✓
★	คำเตือน: อุปกรณ์นี้และชิ้นส่วนที่เข้าถึงได้อาจร้อนจัดระหว่างการใช้งาน โปรดใช้ความระมัดระวังอย่าสัมผัสผลิตภัณฑ์ร้อนภายในเตาอบ ห้ามเด็กอายุต่ำกว่า 8 ขวบใช้อุปกรณ์ ยกเว้นกรณีที่มีผู้ดูแลใกล้ชิด	✓	✓	✓
★	คำเตือน: ไม่ควรให้เด็กใช้เตาอบตามลำพัง ยกเว้นกรณีที่เด็กได้รับคำแนะนำเพียงพอที่จะใช้เตาอบอย่างปลอดภัย และทราบถึงอันตรายจากการใช้ผิดวิธี	✓	✓	✓
★	อุปกรณ์นี้สามารถใช้งานโดยเด็กที่มีอายุ 8 ปีขึ้นไปและบุคคลที่มีสมรรถภาพร่างกาย ประสาทสัมผัส หรือสภาพจิตใจไม่เป็นปกติ หรือขาดประสบการณ์หรือความรู้ ถ้าได้รับการดูแลหรือได้รับคำแนะนำในการใช้งานโดยบุคคลที่รับหน้าที่ดูแล ห้ามเด็กเล่นกับอุปกรณ์นี้ ห้ามเด็กทำความสะอาดหรือบำรุงรักษาอุปกรณ์โดยไม่มีการดูแล	✓	✓	✓
<input type="checkbox"/>	คำเตือน: ห้ามใช้เตาอบหากประตูหรือช่องขอบประตูเสียหาย จนกว่าจะได้รับการซ่อมแซมจากช่างผู้ชำนาญ	✓	✓	✓
<input type="checkbox"/>	คำเตือน: อาจเกิดอันตรายขึ้นได้ หากให้บุคคลที่ไม่ใช่ช่างที่มีความชำนาญเป็นผู้ซ่อมบำรุง ซึ่งต้องมีการถอดฝาครอบของเครื่อง ซึ่งเป็นเครื่องป้องกันพลังงานไมโครเวฟ	✓	✓	✓
<input type="checkbox"/>	คำเตือน: ตรวจสอบว่าปิดอุปกรณ์แล้ว ก่อนที่จะเปลี่ยนหลอดไฟ เพื่อป้องกันไฟฟ้าช็อต	✓	✓	✓
<input type="checkbox"/>	คำเตือน: โปรดอย่าอุณหภูมิของเหลวและอาหารอื่นในภาชนะที่ปิดสนิท เนื่องจากอาจจะระเบิดได้	✓	✓	✓
<input type="checkbox"/>	คำเตือน: ชิ้นส่วนที่เข้าถึงได้อาจร้อนจัดหลังจากการใช้งาน เพื่อหลีกเลี่ยงการลวกปรอทอย่าให้เด็กเล็กเข้าใกล้	✓	✓	✓
★	คำเตือน: ระหว่างการอุ่นร้อนเครื่องดื่มด้วยไมโครเวฟ จะมีการเดือดที่ล้ำช้าออกไป ดังนั้น โปรดใช้ความระมัดระวังเมื่อถือภาชนะ เพื่อป้องกันสถานการณ์นี้ โปรดพักอาหารอย่างน้อย 20 วินาที หลังจากปิดเตาอบ เพื่อให้อุณหภูมิกระจายตัวอย่างสม่ำเสมอทุกครั้ง คนอาหารระหว่างให้ความร้อนถ้าจำเป็น และคนทุกครั้งหลังจากอุ่น ในกรณีที่ของเหลวลวก โปรดปฏิบัติตามคำแนะนำในการปฐมพยาบาล: <ul style="list-style-type: none"> • แช่บริเวณที่ถูกลวกในน้ำเย็นเป็นเวลาอย่างน้อย 10 นาที • พันด้วยผ้าพันแผลที่แห้งและสะอาด • โปรดอย่าทาครีม น้ำมัน หรือโลชั่น 	✓	✓	✓

★	ระหว่างการใช้งานอุปกรณ์จะมีความร้อนสูง โปรดใช้ความระมัดระวังอย่าสัมผัสผลิตภัณฑ์ร้อนภายในเตาอบ	✓	✓	✓
★	คำเตือน: ควรคนหรือเขย่าสิ่งที่บรรจุอยู่ในขวดนมเด็กและขวดอาหารเด็ก และตรวจสอบอุณหภูมิก่อนที่จะรับประทาน เพื่อลดความเสี่ยงของการลวก		✓	
★	อุปกรณ์นี้ไม่เหมาะสำหรับบุคคล (รวมถึงเด็ก) ที่มีสมรรถภาพร่างกาย ประสาทสัมผัส หรือสภาพจิตใจไม่เป็นปกติ หรือขาดประสบการณ์หรือความรู้ ยกเว้นจะได้รับการดูแลหรือได้รับคำแนะนำในการใช้งานโดยบุคคลที่รับหน้าที่ดูแล	✓	✓	✓
★	เตาอบนี้ควรอยู่ในตำแหน่งและความสูงที่เหมาะสม เพื่อให้สามารถเข้าถึงส่วนภายในเตาอบและบริเวณควบคุมได้ง่าย	✓	✓	✓
★	ก่อนที่จะใช้เตาอบเป็นครั้งแรก ควรใช้งานเตาอบกับน้ำเป็นเวลา 10 นาที จากนั้นจึงค่อยใช้	✓	✓	✓
★	เตาไมโครเวฟนี้จะตั้งอยู่ในตำแหน่งที่คุณสามารถเอื้อมถึงปลั๊กได้ง่าย ถ้าอุปกรณ์มีเสียงผิดปกติ มีควันหรือกลิ่นไหม้ ให้ถอดปลั๊กทันที และติดต่อศูนย์บริการใกล้บ้าน	✓	✓	✓
<input type="checkbox"/>	ระหว่างการทำความสะอาด พื้นผิวอาจร้อนกว่าปกติ และควรระวังอย่าให้เด็กอยู่ใกล้เคียง (เฉพาะรุ่นที่มีการทำความสะอาด)	✓	✓	
<input type="checkbox"/>	ต้องจัดเศษอาหารที่หกค้างอยู่ ก่อนที่จะทำความสะอาด และควรระบุว่ามีสิ่งสกปรกได้ใช้ใดไว้ในเตาอบระหว่างการทำความสะอาดได้ (เฉพาะรุ่นที่มีการทำความสะอาด)	✓	✓	✓
★	อุปกรณ์นี้ควรจะสามารถถอดสายไฟออกได้ง่ายหลังจากที่ติดตั้งแล้ว สามารถดำเนินการถอดอุปกรณ์นี้ออกจากแหล่งจ่ายไฟด้วยการทำให้ปลั๊กอยู่ในตำแหน่งที่เอื้อมถึง หรือใช้ตัวคีบกับการเดินสายตามที่ตามกฎหมายของการเดินสาย (เฉพาะรุ่นที่ทำงานในตู้เท่านั้น)	✓	✓	✓


⚠️ ข้อควรระวัง		🔥	⚡	🔥	⚡
★	โปรดใช้เฉพาะภาชนะที่เหมาะสมกับเตาไมโครเวฟเท่านั้น ห้ามใช้ภาชนะที่เป็นโลหะ ภาชนะที่มีขอบทองหรือเงิน เหล็กเสียบ ส้อม ฯลฯ นำหลอดที่ใช้ปิดถุงออกจากถุงกระดาษหรือถุงพลาสติกก่อน สาเหตุ: อาจมีประกายไฟเกิดขึ้น ซึ่งทำให้เตาไมโครเวฟเสียหาย	✓		✓	✓
★	เมื่ออุ่นอาหารในภาชนะพลาสติก โปรดระวังว่าอาจจะมีการติดไฟขึ้นในเตาอบ	✓		✓	
⚠️	ห้ามใช้เตาไมโครเวฟเพื่อทำให้หนังสือพิมพ์หรือผ้าแห้ง	✓		✓	✓
★	ใช้เวลาสั้นลงสำหรับอาหารปริมาณน้อย เพื่อป้องกันอาหารร้อนเกินไปและไหม้	✓		✓	✓
🔄	ถ้าพบว่ามีความร้อน ให้ปิดหรือถอดปลั๊กอุปกรณ์ และอย่าเปิดประตูเตาอบ เพื่อไม่ให้เกิดเปลวไฟ	✓		✓	✓
★	ทำความสะอาดและจัดอาหารตกค้างอย่างสม่ำเสมอ	✓	✓		✓
⚠️	ห้ามจุ่มสายไฟหรือปลั๊กในน้ำ และระวังอย่าให้สายไฟอยู่ใกล้พื้นผิวที่ร้อน	✓	✓		
⚠️	ห้ามอุ่นร้อนหรือให้ความร้อนกับไขแข็งเปลือกหรือไข่ต้มในเตาไมโครเวฟ เนื่องจากอาจระเบิดได้ แม้ว่าจะสิ้นสุดการให้ความร้อนของไมโครเวฟแล้วก็ตาม นอกจากนี้ อย่าให้ความร้อนขวดหรือภาชนะที่ปิดฝาสนิทหรือเป็นสุญญากาศ ถ้วยที่มีเปลือก มะเขือเทศ ฯลฯ			✓	✓
⚠️	ห้ามปิดหรือบังช่องระบายอากาศด้านหลังของเตาด้วยผ้าหรือกระดาษ ผ้าหรือกระดาษอาจติดไฟ ขณะที่มีกระเปาะอากาศร้อนออกจากเตา เตาอบอาจมีความร้อนสูงเกินไป และตัดการทำงานโดยอัตโนมัติ และจะไม่สามารถใช้งานได้จนกว่าจะเย็นลง	✓		✓	
👉	ทุกครั้ง จะต้องใช้ถุงมือกันความร้อนขณะนำอาหารออกจากเตาเพื่อป้องกันความร้อนลวก			✓	
👉	ห้ามสัมผัสขดลวดความร้อนหรือผนังด้านในของเตาอบจนกว่าจะเย็นลงเสียก่อน			✓	

★	คนของเหลวเมื่อถึงครึ่งหนึ่งของเวลาอุ่น หรือหลังจากสิ้นสุดการอุ่นร้อน และพักให้ของเหลวเย็นลงอย่างน้อย 20 วินาทีหลังจากให้ความร้อนเพื่อป้องกันการเดือดและกระเด็น			✓	
★	ยืนห่างจากเตาอบประมาณหนึ่งช่วงแขนเมื่อเปิดประตู เพื่อป้องกันไอน้ำหรืออากาศร้อนลวก			✓	
⚠️	ห้ามใช้งานไมโครเวฟเมื่อไม่มีอาหารอยู่ภายในเตา เตาไมโครเวฟจะปิดลงโดยอัตโนมัติหลังจากผ่านไป 30 นาทีเพื่อความปลอดภัย ขอแนะนำให้วางแก้วน้ำไว้ภายในเตาอบตลอดเวลา เพื่อดูดซับพลังงานไมโครเวฟในกรณีที่เตาไมโครเวฟทำงานโดยไม่ตั้งใจ	✓			✓
⚠️	ห้ามใช้สารทำความสะอาดที่มีฤทธิ์กัดกร่อนหรือที่ขัดโลหะเพื่อทำความสะอาดประตูเตาอบ เนื่องจากจะทำให้พื้นผิวเป็นรอยและทำให้แก้วแตกได้	✓			✓
★	ติดตั้งเตาอบตามระยะห่างที่กำหนดในคู่มือ (ดูที่ การติดตั้งเตาไมโครเวฟ)	✓			✓
★	ใช้ความระมัดระวังเมื่อต่ออุปกรณ์ไฟฟ้าเข้ากับเตาเสียบปลั๊กเตาอบ	✓	✓	✓	


การติดตั้งเตาไมโครเวฟ

วางเตาไว้บนพื้นผิวที่เรียบและได้ระดับ 85 ซม. เหนือพื้น พื้นผิวควรมีความแข็งแรงเพียงพอที่จะรับน้ำหนักของเตาได้อย่างปลอดภัย


- เมื่อคุณติดตั้งเตาอบ โปรดจัดวางให้มีการระบายอากาศที่เพียงพอ โดยเว้นช่องว่างอย่างน้อย 10 ซม. (4 นิ้ว) ที่ด้านหลังและด้านข้างของเตาอบ และเว้นที่ 20 ซม. (8 นิ้ว) ด้านบนของเตาอบ

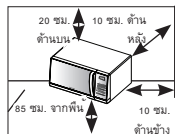


- นำวัสดุที่เป็นบรรจุภัณฑ์ภายในเตาอบออก ติดตั้งวงแหวนและจานหมุน และตรวจสอบว่าสามารถหมุนได้อย่างอิสระ

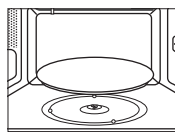

- เตาไมโครเวฟนี้จะต้องอยู่ในตำแหน่งที่คุณสามารถเอื้อมถึงปลั๊กโดยง่าย

 กรณีที่สายไฟของเครื่องใช้ไฟฟ้าทำให้เกิดเสียหาย ต้องใช้สายไฟหรือชุดสายไฟเฉพาะที่มีให้จากผู้ผลิตหรือตัวแทนผู้ให้บริการ เพื่อความปลอดภัยของคุณ โปรดต่อสายไฟกับเต้าเสียบสามขา 220 โวลต์ 50 Hz ที่มีการลงกราวด์ ถ้าสายไฟของเครื่องใช้ไฟฟ้าเสียหาย จะต้องเปลี่ยนทดแทนด้วยสายไฟพิเศษ


 ห้ามติดตั้งเตาไมโครเวฟในบริเวณที่มีความร้อนและความชื้นสูง เช่น ถัดจากเตาอบธรรมดาหรือเครื่องทำความร้อน โปรดปฏิบัติตามข้อกำหนดการจ่ายไฟของเตาอบ และหากจะใช้สายต่อ จะต้องใช้สายที่เป็นมาตรฐานเดียวกับสายไฟของเตาอบ เช็ดด้านในของช่องเปิดประตูด้วยผ้าหมาด ก่อนที่จะใช้เตาไมโครเวฟเป็นครั้งแรก








การตั้งเวลา

เตาไมโครเวฟของคุณมีนาฬิกาภายใน เมื่อมีการจ่ายไฟ "0", "88:88" หรือ "12:00" จะปรากฏบนหน้าจอแสดงผลโดยอัตโนมัติ

โปรดตั้งเวลาปัจจุบัน ซึ่งสามารถแสดงเวลาในระบบ 24 หรือ 12 ชั่วโมง คุณจะต้องตั้งเวลาของนาฬิกา:

- เมื่อติดตั้งเตาไมโครเวฟเป็นครั้งแรก
- หลังจากไฟดับ

 อย่าลืมปรับเวลา ถ้าคุณต้องสลับระหว่างเวลาของฤดูร้อนและฤดูหนาว

- ถ้าต้องการแสดงเวลาในรูปแบบ... ให้กดปุ่ม ...
เวลาแบบ 24 ชั่วโมง หนึ่งครั้ง
เวลาแบบ 12 ชั่วโมง สองครั้ง
- กดปุ่ม  และ  เพื่อกำหนดชั่วโมง
- กดปุ่ม 
- กดปุ่ม  และ  เพื่อตั้งนาฬิกา
- กดปุ่ม 



ควรทำอะไรเมื่อเกิดข้อสงสัยหรือมีปัญหา

ถ้าคุณประสบปัญหาอย่างใดอย่างหนึ่งที่ปรากฏด้านล่าง โปรดลองใช้วิธีแก้ไขปัญหาก็ได้


ซึ่งเป็นอาการปกติ

- เกิดไอน้ำเกาะตัวในเตาอบ
- มีอากาศหมุนเวียนกลับไปและด้านนอกของเตาอบ
- มีการสะท้อนแสงรอบๆ ประตูและกรอบด้านนอก
- มีไอน้ำออกมาจากข้างประตูหรือช่องระบายอากาศ

เตาอบไม่เริ่มทำงานเมื่อปิดปุ่ม

- ประตูปิดเรียบร้อยหรือไม่

อาหารไม่สุกเลย

- คุณกำหนดเวลาถูกต้อง และกดปุ่ม  แล้วหรือไม่
- ประตูปิดเรียบร้อยหรือไม่
- คุณใช้วงจรไฟฟ้าเกินกำลัง และทำให้ฟิวส์ขาดหรือทำให้เบรกเกอร์ตัดไฟหรือไม่

อาหารสุกเกินไปหรือไม่สุกพอ

- คุณใช้ระยะเวลาในการอบอาหารเหมาะสมกับชนิดของอาหารหรือไม่
- ระดับพลังงานที่เลือกถูกต้องหรือไม่

มีประกายไฟหรือเสียงแตกเกิดขึ้นภายในเตาอบ (เกิดประกายไฟ)

- คุณใช้จานที่มีขอบโลหะหรือไม่
- คุณลืมส้อมหรือเครื่องใช้ในครัวที่เป็นโลหะไว้ในเตาอบหรือไม่
- แผ่นฟอยล์อะลูมิเนียมใกล้กับผนังด้านในของเตาอบหรือไม่

เตาอบทำให้เกิดสัญญาณรบกวนหรือวิทยุหรือโทรทัศน์


- คุณอาจพบสัญญาณรบกวนโทรทัศน์หรือวิทยุบ้างเล็กน้อย เมื่อเตาอบทำงาน ซึ่งเป็นอาการปกติ นี่เป็นอาการปกติในการแก้ไขปัญหานี้ โปรดติดตั้งเตาไมโครเวฟให้ห่างจากเครื่องรับโทรทัศน์ วิทยุ และเสาอากาศ
- ถ้าไมโครโปรเซสเซอร์ของเตาอบพบสัญญาณรบกวน อาจจะมีการรีเซ็ตจอแสดงผล ในการแก้ไขปัญหานี้ ให้ถอดปลั๊กและต่อใหม่อีกครั้ง ตั้งเวลาใหม่

 ถ้าคำแนะนำข้างต้นไม่สามารถแก้ไขปัญหาของคุณได้ โปรดติดต่อตัวแทนจำหน่ายหรือฝ่ายบริการหลังการขายของ SAMSUNG

การอบ/อุ่นอาหาร

ขั้นตอนต่อไปนี้จะกล่าวถึงการอบและการอุ่นอาหาร
โปรดตรวจสอบการตั้งค่าการอบอาหารทุกครั้ง ก่อนที่จะปล่อยให้เตาอบทำงานตามลำพัง
ขั้นแรก วางอาหารที่ส่วนกลางของจานหมุน จากนั้น ปิดประตู

1. กดปุ่ม

ผลลัพธ์: สัญญาณ 850 W
(ระดับพลังงานการอบอาหารสูงสุด) จะปรากฏ:
เลือกระดับพลังงานที่เหมาะสมด้วยการกดปุ่ม  อีกครั้งจนกระทั่งได้ระดับพลังงานที่ต้องการ โปรดดูตารางแสดงระดับกำลังไฟ


 ไมโครเวฟ
Microwave


2. กำหนดเวลาในการอบอาหาร โดยกดปุ่ม และ ตามต้องการ


— +

3. กดปุ่ม

ผลลัพธ์: ไฟของเตาอบจะสว่างขึ้น และจานหมุนจะเริ่มหมุน
1) เตาอบจะเริ่มตั้งการอบอาหาร เมื่อเสร็จแล้วก็จะส่งสัญญาณเตือนสี่ครั้ง
2) เตาอบจะส่งสัญญาณเตือน 3 ครั้ง (นาฬิกาจะครั้ง)
3) เวลาปัจจุบันจะปรากฏขึ้นอีกครั้ง

 เริ่มต้น / + 30 วินาที
Start / +30 sec

 ห้ามเปิดเครื่อง หากเตาอบว่างเปล่า

 หากคุณต้องการอุ่นอาหารเป็นเวลาสั้นๆ โดยใช้พลังงานสูงสุด (850 W) คุณสามารถกดปุ่ม **+30 วินาที** หนึ่งครั้งต่อเวลาการอบ 30 วินาที เตาอบจะทำงานทันที



ระดับพลังงาน

คุณสามารถเลือกระดับพลังงานต่อไปนี้


ระดับพลังงาน	กำลังไฟฟ้า	
	MWO	ย่าง
สูง	850 W	-
สูงปานกลาง	600 W	-
ปานกลาง	450 W	-
ต่ำปานกลาง	300 W	-
ละลายน้ำแข็ง (❄️)	180 W	-
ต่ำรักษาความร้อน	100 W	-
ย่าง	-	1100 W
ผสม I (🔥🍷)	600 W	1100 W
ผสม II (🔥🍷)	450 W	1100 W
ผสม III (🔥🍷)	300 W	1100 W

 
- 📌 หากคุณเลือกระดับพลังงานสูงขึ้น คุณจะต้องลดเวลาในการอบลง
- 📌 หากคุณเลือกระดับพลังงานต่ำลง คุณจะต้องเพิ่มเวลาในการอบขึ้น

การหยุดการอบอาหาร

คุณสามารถหยุดอบอาหารเมื่อใดก็ได้ เพื่อตรวจสอบอาหาร

1. ในการหยุดชั่วคราว ให้เปิดประตู

ผลลัพธ์: การอบจะหยุดลง ในการอบอาหารต่อ ให้ปิดประตูและกดปุ่ม  อีกครั้ง



2. ในการหยุดอบ ให้กดปุ่ม 

ผลลัพธ์: การอบจะหยุดลง หากคุณต้องการยกเลิกการตั้งค่าการอบ ให้กดปุ่ม **หยุด(🛑)** อีกครั้ง



 คุณสามารถยกเลิกการตั้งค่าต่างๆ ก่อนที่จะเริ่มต้นการอบอาหาร โดยกดปุ่ม **หยุด (🛑)**

การปรับเวลาอบอาหาร

คุณสามารถเพิ่มเวลาในการอบอาหาร โดยกดปุ่ม +30 วินาทีหนึ่งครั้งสำหรับการเพิ่ม 30 วินาที

กดปุ่ม 30 วินาที หนึ่งครั้งสำหรับการเพิ่มเวลา 30 วินาที



การใช้คุณสมบัติระบบกำจัดกลิ่น

คุณสามารถใช้คุณสมบัตินี้หลังจากการอบอาหารที่มีกลิ่นแรง หรือเมื่อมีควันมากเกินไปในเตา

กดปุ่ม **กำจัดกลิ่น (🌀)** หลังจากที่คุณทำความสะอาดเสร็จแล้ว คุณจะได้ยินเสียงสัญญาณสี่ครั้ง




 เวลาในการกำจัดกลิ่น 5 นาที คุณสามารถเพิ่มได้ครั้งละ 30 นาที เมื่อกดปุ่ม +30 วินาที

 เวลาในการกำจัดกลิ่นสูงสุดคือ 15 นาที

 
การใช้ระบบทำความสะอาดด้วยไอน้ำ

ระบบทำความสะอาดด้วยไอน้ำจะพ่นไอน้ำไปทั่วพื้นผิวด้านในของช่องเตาอบ หลังจากที่ใช้ฟังก์ชันนี้ คุณสามารถทำความสะอาดด้านในของช่องเตาอบได้อย่างง่ายดาย


 ใช้ฟังก์ชันนี้เฉพาะหลังจากที่เตาอบเย็นสนิทเท่านั้น (อุณหภูมิปกติ)

 นำธรรมาทาน้ำร้อน ห้ามใช้น้ำกลั่น


1. เปิดประตู



 2. เติมน้ำตามเส้นบอก (ระดับน้ำ) ภายในถาดก้นน้ำ (เส้นนี้เท่ากับประมาณ 50 มล.)



 3. ใส่ถ้วยน้ำในที่ใช้ถ้วยน้ำด้านบนที่มีผนังด้านขวาของภายในเตาอบ




4. ปิดประตู

5. กดปุ่ม ทำความสะอาดด้วยไอน้ำ

อาจพบว่ามี ละอองน้ำ ระหว่างการทำทำความสะอาดด้วยไอน้ำ ซึ่งไม่ใช่การทำงานผิดปกติ แต่ไอน้ำจะระเหยแห้งภายใน

ทำความสะอาด
ด้วยไอน้ำ
Steam Clean

 
6. เปิดประตู



7. โปรดทำความสะอาดช่องเตาอบด้วยผ้าแห้งสำหรับเช็ดจาน น้ำจานหมูนอกให้เหลือเฉพาะตะแกรงด้านล่างและกระดาดobenประสงค์

คำเตือน!

 - ถ้วยใส่น้ำใช้ได้เฉพาะกับโหมด "ทำความสะอาดด้วยไอน้ำ" เท่านั้น
- เมื่ออบอาหารที่ไม่ใช่ของเหลว ให้นำถ้วยใส่น้ำออก เพื่อไม่ให้เกิดความเสียหายและอาจทำให้ติดไฟได้



การใช้คุณสมบัติอาหารจานด่วน

สำหรับคุณสมบัติอาหารจานด่วน การกำหนดเวลาอบอาหารจะกระทำโดยอัตโนมัติ ขั้นแรก วางอาหารที่ส่วนกลางของจานหมุน และปิดประตู

1. กดปุ่ม อาหารจานด่วน

 อาหารจานด่วน
Quick Meal

2. เลือกประเภทอาหารที่ต้องการ โดยกดปุ่ม อาหารจานด่วน โปรดดูตารางในหน้าถัดไป เพื่อดูข้ออธิบายการตั้งค่าต่างๆ

 อาหารจานด่วน
Quick Meal

3. กดปุ่ม เริ่มทำงาน (▶)

ผลลัพธ์:

- เตาอบจะอบอาหารตามการตั้งค่าล่วงหน้าที่คุณเลือกไว้
- เมื่อสิ้นสุดการอบอาหาร เตาจะส่งเสียงเตือน พร้อมกับกะพริบ "0" สีครั้ง หลังจากนั้นเตาอบจะส่งเสียงเตือนนาฬิกาครั้ง

 เริ่มทำงาน / +30 วินาที
Start / +30 sec

การตั้งค่าอาหารจานด่วน

ตารางต่อไปนี้จะแสดงโปรแกรมอาหารจานด่วนต่างๆ รวมทั้งปริมาณ เวลาพักอาหาร และคำแนะนำที่เหมาะสม

รหัส	อาหาร	ปริมาณอาหาร	ส่วนประกอบ
1	พะมี่สำเร็จรูป	670 กรัม	หมูสับ - 100 กรัม, ไข่ - 1 ฟอง, ผัก - 100 กรัม, พะมี่สำเร็จรูป - 1 ซอง, น้ำมัน - 2 ถ้วย
	คำแนะนำ		
2	ขนมจีบกุ้งแช่แข็ง	192 กรัม (16/ชิ้น)	ขนมจีบกุ้งแช่แข็ง - 192 กรัม
	คำแนะนำ		
	1. ตัดมุมของช่องและอบ		

รหัส	อาหาร	ปริมาณอาหาร	ส่วนประกอบ
3	ซาลาเปาไส้หมูสับแซ่แข็ง	180 กรัม (30/ชิ้น)	ซาลาเปาไส้หมูสับแซ่แข็ง - 180 กรัม
	คำแนะนำ		
	1. ตัดมุมของซองและอบ		
4	เกี๊ยวกุ้งแซ่แข็ง	250 กรัม	เกี๊ยวกุ้งแซ่แข็ง - 250 กรัม
	คำแนะนำ		
	1. นำถุงด้านนอกออกก่อนอุ่น 2. เจาะพินัมให้เป็นรู 3-4 ครั้งและอบ		
5	ข้าวต้มปลาเก๋าแซ่แข็ง	350 กรัม	ข้าวต้มปลาเก๋าแซ่แข็ง - 350 กรัม
	คำแนะนำ		
	1. นำถุงด้านนอกออกก่อนอุ่น 2. เปิดฝาครอบ เติมน้ำตามขีดที่ระบุ 3. ปิดฝาให้แน่นไว้เพื่อให้ระเหยไอน้ำออกไ้ระหว่างให้ความร้อนและอบอาหาร		
6	สปาเก็ตตี้ซอสไก่แซ่แข็ง	450 กรัม	สปาเก็ตตี้ซอสไก่แซ่แข็ง - 450 กรัม
	คำแนะนำ		
	1. นำถุงด้านนอกออกก่อนอุ่น 2. เจาะพินัมให้เป็นรู 3-4 ครั้งและอบ		

การใช้คุณสมบัติเมนูไทย

สำหรับคุณสมบัติเมนูไทย การกำหนดเวลาอบอาหารจะกระทำโดยอัตโนมัติ
ขั้นแรก วางอาหารที่ส่วนกลางของจานหมุน และปิดประตู

1. กดปุ่ม เมนูไทย



2. เลือกประเภทอาหารที่คุ้นเคยด้วยการกดปุ่ม เมนูไทย โปรดดูตารางในหน้าถัดไป เพื่อดูคำอธิบายการตั้งค่าต่างๆ



3. กดปุ่ม เริ่มทำงาน (▶)

ผลลัพธ์:

เตาอบจะอบอาหารตามการตั้งค่าล่วงหน้าทีเลือกไว้

- เมื่อสิ้นสุดการอบอาหาร เตาจะส่งเสียงเตือน พร้อมกับกะพริบ "0" สีดิ่ง หลังจากนั้นเตาอบจะส่งเสียงเตือนนาฬิกาครั้ง



การตั้งค่าเมนูไทย

ตารางต่อไปนี้จะแสดงโปรแกรม เมนูไทย แบบต่างๆ รวมทั้งปริมาณ เวลาพักอาหาร และคำแนะนำที่เหมาะสม

รหัส	อาหาร	ปริมาณอาหาร	ส่วนประกอบ
1	ข้าว	320 กรัม	ข้าว - 1 ถ้วย, น้ำ - 1¼ ถ้วย
	คำแนะนำ		
	1. เติมน้ำ น้ำในถ้วยและปิดฝา 2. พุงและปิดฝาไว้เป็นเวลา 15-20 นาทีก่อนรับประทาน		
2	ข้าวกล้อง	350 กรัม	ข้าวกล้อง - 1 ถ้วย, น้ำสำหรับพุง - 2 ถ้วย, น้ำสำหรับล้างข้าว
	คำแนะนำ		
	1. เติมน้ำข้าวกล้องในถ้วย เติมน้ำและปิดฝา 2. พุงและรอ 10 นาทีก่อนรับประทาน		


รหัส	อาหาร	ปริมาณอาหาร	ส่วนประกอบ
3	ข้าวเหนียว	350-400 กรัม	ข้าวเหนียว - 1 ถ้วย, น้ำ - ½ ถ้วย
	คำแนะนำ 1. เติมห่วงข้าวเหนียว เติมน้ำในถ้วยและปิดฝา 2. พุงและปิดฝาไว้เป็นเวลา 15-20 นาทีก่อนรับประทาน		
4	ข้าวต้มโจ๊กหมู	600-750 กรัม	ข้าวสวย - 1 ถ้วย, น้ำ - 500 มล., หมูสับ - ½ ถ้วย, พริกไทยป่น - 1 ช้อนโต๊ะ, ซีอิ้ว - 1 ช้อนโต๊ะ, น้ำมันหอย - 1 ช้อนโต๊ะ, ต้นหอม, ต้นข่า, ผักชี - ½ ถ้วย
	คำแนะนำ 1. นำหมูสับมาคลุกพริกไทย น้ำมันหอยและปั้นเป็นก้อนกลม 2. ใส่หมูก้อน ข้าวสวย น้ำ และปรุงรสด้วยผงปรุงรสหมู คนให้เข้ากันและอบ 3. โรยต้นข่า ต้นหอม ผักชีก่อนรับประทาน		
5	สปาเก็ตตี้	220 กรัม	สปาเก็ตตี้ - 80 กรัม, น้ำมัน - 500 มล.
	คำแนะนำ 1. เติมหอยในน้ำและคนให้เข้ากัน ใส่สปาเก็ตตี้และอบ 2. เทน้ำทิ้งและแช่น้ำเย็น เติมน้ำมันพืชและคน		
6	ไข่ต้ม	400-450 กรัม	ไข่สด - 2 ฟอง, นมข้นจืด - 2 ช้อนโต๊ะ, น้ำ - ¼ ถ้วย, ซอสถั่วเหลืองแบบญี่ปุ่น - 1 ช้อนโต๊ะ, เกลือ - 1/8 ช้อนโต๊ะ, ปูอัด - ¼ ถ้วย, กุ้งต้ม - 4 ตัว
	คำแนะนำ 1. ใส่ไข่ในถ้วย ตีและเติมนมข้นจืด น้ำและปรุงรสด้วยซอสถั่วเหลือง เติมหอยและตีให้เข้ากัน 2. อบและตกแต่งด้วยปูอัดและกุ้งก่อนรับประทาน		

รหัส	อาหาร	ปริมาณอาหาร	ส่วนประกอบ
7	สปาเก็ตตี้ครีมซอส	450-500 กรัม	หัวหอม - ¼ ถ้วย, น้ำ - ¼ ถ้วย, แยมลวก - ¼ ถ้วย, สปาเก็ตตี้ - 80 กรัม, เนยเค็ม - 2 ช้อนโต๊ะ, เบยชีฟ - 3 ใบ, แป้ง - 1 ช้อนโต๊ะ, ไข่ครีม - 100 มล., เติมน้ำมันหอย - ¼ ถ้วย, เกลือ, พริกไทย - ¼ ช้อนโต๊ะ, มอซซาเรลล่าชีส - 2 ช้อนโต๊ะ
	คำแนะนำ 1. ผสมน้ำและแป้ง จากนั้นเติมนม เนย ไข่ครีม หัวหอมสับ แยม เติมน้ำมันหอยพริกไทยและเกลือ 2. อบและเติมนมมอซซาเรลล่าชีส คนและรับประทานพร้อมสปาเก็ตตี้		
8	บิกโกนิวอร์ชินีส	200 กรัม	บิกโก - 250 กรัม, น้ำมันหอย - 2 ช้อนโต๊ะ, พริกไทย - ¼ ช้อนโต๊ะ, ซอสพริก - 1 ช้อนโต๊ะ, เบยชีฟ - 1 ใบ
	คำแนะนำ 1. ทำซอสหมักโดยผสมน้ำมันหอย เบยชีฟ พริกไทย ซอสพริก จากนั้นหมักกับบิกโกไปแล้วทิ้งไว้ 15 นาที 2. วางบิกโกบนถาดอบที่ร้อนแล้วอบ 3. เมื่อมีสัญญาณเตือนดังขึ้น ให้พลิกบิกโกแล้วอบต่อ		
9	ไก่ย่างทั้งตัว	800-1000 กรัม	ไก่ทั้งตัว (1 กก.) - 1 ตัว, น้ำตาล - ¼ ช้อนโต๊ะ, น้ำมันหอย - 5 ช้อนโต๊ะ, ซีอิ้ว - 3 ช้อนโต๊ะ, พริกไทยดำ - 1 ช้อนโต๊ะ, ผักชี - 2 ต้น, กระเทียม - 2 ช้อนโต๊ะ, น้ำมันพืช - 2 ช้อนโต๊ะ, เหล้า - 3 ช้อนโต๊ะ
	คำแนะนำ 1. ปั่นกระเทียม พริกไทยดำ และรากผักชีเข้าด้วยกัน ปรุงรสด้วยน้ำตาล น้ำมันหอย ซีอิ้ว เหล้า และน้ำมันพืช จากนั้นผสมเข้าด้วยกัน 2. คลุกสมุนไพรในตัวไก่และยัดสมุนไพรเข้าไปในตัวไก่ ทิ้งไว้ 15-20 นาที 3. วางไก่หมักบนถาดย่างจากนั้นจี่อบ 4. เมื่อมีสัญญาณเตือนดังขึ้น ให้กลับไก่แล้วอบต่อ นำไก่ออกมา แล้วรับประทานพร้อมน้ำจิ้มรสเผ็ด		

การใช้คุณสมบัติละลายน้ำแข็งอัตโนมัติ

คุณสมบัติการละลายน้ำแข็งอัตโนมัติช่วยให้คุณละลายเนื้อไก่ ปลา ชนบั้งและเค้กที่แช่แข็งไว้ได้ เวลาและระดับพลังงานจะถูกกำหนดโดยอัตโนมัติ

คุณเพียงแต่เลือกโปรแกรมและน้ำหนักเท่านั้น

 โปรดใช้กับผลิตภัณฑ์ที่ระบุไว้กับไมโครเวฟได้เท่านั้น

ขั้นแรก ให้วางอาหารแช่แข็งไว้กึ่งกลางจานหมุน และปิดประตู

1. เลือกประเภทอาหารที่อบ โดยกดปุ่ม **ละลายน้ำแข็ง** (❄️) หนึ่งครั้งหรือตามจำนวนที่เหมาะสม (โปรดดูข้อมูลที่ด้านล่างข้าง)

❄️❄️ ละลายน้ำแข็ง Defrost


2. เลือกน้ำหนักอาหาร โดยกดปุ่ม **(—)** และ **(+)** สามารถตั้งค่าน้ำหนักได้สูงสุดถึง 1500 กรัม

— +

3. กดปุ่ม **◇**

ผลลัพธ์:





- การละลายน้ำแข็งจะเริ่มขึ้น
- เตาอบจะส่งเสียงเตือนเมื่อครบครึ่งเวลาการละลายน้ำแข็งเพื่อให้คุณกลับอาหาร
- กดปุ่ม **◇** อีกครั้ง เพื่อละลายน้ำแข็งจนเสร็จ


 คุณสามารถละลายน้ำแข็งโดยกำหนดค่าเองได้เช่นกัน โดยเลือกการทำงานแบบไมโครเวฟ/อุณหภูมิ และใช้ระดับพลังงาน 180 W โปรดดูรายละเอียดเพิ่มเติมในหัวข้อ "การอบ/อุณหภูมิ" ในหน้า 10

การตั้งค่าการละลายน้ำแข็งอัตโนมัติ

ตารางต่อไปนี้เป็นตารางโปรแกรมละลายน้ำแข็งอัตโนมัติแบบต่างๆ รวมทั้งปริมาณ เวลาพักอาหาร และคำแนะนำที่เหมาะสม


โปรดนำอาหารออกจากบรรจุภัณฑ์ก่อนที่จะละลายน้ำแข็ง วางเนื้อไก่ ปลา ชนบั้งและเค้กแช่แข็งในจานกระเบื้อง


รหัส/อาหาร	ปริมาณอาหาร	เวลาพัก	คำแนะนำ
1. เนื้อ 	200-1500 กรัม	20-90 นาที	หุ้มส่วนขอบด้วยฟอยล์อะลูมิเนียม กลับเนื้อเมื่อได้ยินเสียงจากเตาอบ โปรแกรมนี้เหมาะสำหรับเนื้อ แกะ หมู สเต็ก เนื้อเป็นชิ้นและเนื้อสัตว์
2. เป็ดไก่ 	200-1500 กรัม	20-90 นาที	หุ้มขาและปลายปีกด้วยฟอยล์อะลูมิเนียม กลับเมื่อได้ยินเสียงจากเตาอบ โปรแกรมนี้เหมาะสำหรับไก่เป็นตัวและไก่เป็นชิ้น
3. ปลา 	200-1500 กรัม	20-80 นาที	หุ้มส่วนหางของปลาที่ไม่หันด้วยฟอยล์อะลูมิเนียม กลับเมื่อได้ยินเสียงจากเตาอบ โปรแกรมนี้เหมาะสำหรับปลาทั้งตัวและชิ้นเนื้อปลา
4. ชนบั้ง/เค้ก 	125-625 กรัม	10-60 นาที	วางชนบั้งบนกระดาษสำหรับเตาอบ และพลิกกลับด้านเมื่อได้ยินเสียงสัญญาณจากเตาอบ วางเค้กบนจานกระเบื้อง และพลิกกลับด้านเมื่อได้ยินเสียงสัญญาณจากเตาอบ (เตาอบจะทำงานต่อไป และจะหยุดเมื่อคุณเปิดประตู) โปรแกรมนี้เหมาะสำหรับชนบั้งทุกประเภท ไม่ว่าจะเป็นแบบตัดหรือทั้งก้อน เช่นเดียวกับชนบั้งก้อนและแท่งแบบฟรังค์ส วางก้อนชนบั้งเป็นวงกลม โปรแกรมนี้เหมาะสำหรับชีสเค้ก บิสกิต ชีสเค้ก และฟักทองประเภท แต่ไม่เหมาะสำหรับขนมเพสทรีแบบช็อคหรือคริสต์ เค้กผลไม้หรือผลไม้ รวมทั้งเค้กราดช็อคโกแลต

 เลือกฟังก์ชันทำละลายแบบกำหนดเอง โดยใช้ระดับพลังงาน 180 W หากต้องการทำละลายอาหารแบบกำหนดเอง หากต้องการรายละเอียดเพิ่มเติมเกี่ยวกับการทำละลายแบบกำหนดเองและเวลาในการทำละลาย โปรดดูที่หน้า 23-24

การเลือกอุปกรณ์เสริม

ใช้ภาชนะที่เหมาะสมสำหรับไมโครเวฟ อย่าใช้ภาชนะพลาสติก จาน ถ้วยกระดาษ กระดาษเช็ดปาก เป็นต้น หากคุณต้องการเลือกการอบแบบผสม (ไมโครเวฟและย่าง) โปรดใช้ภาชนะที่เหมาะสมสำหรับเตาไมโครเวฟและเตาอบเท่านั้น ภาชนะหรือเครื่องใช้ที่เป็นโลหะจะทำให้เตาอบเสียหาย

 -  โปรดดูรายละเอียดเพิ่มเติมเกี่ยวกับภาชนะหรือเครื่องใช้ที่เหมาะสมในคู่มือสำหรับอุปกรณ์การทำอาหารที่หน้า 18




การย่าง

การย่างช่วยให้คุณอุ่นและทำให้อาหารเกรียมได้อย่างรวดเร็ว โดยไม่ต้องใช้ไมโครเวฟ เรามีตะแกรงย่างมาให้พร้อมกับเตาไมโครเวฟเพื่อวัตถุประสงค์นี้

 
1. อุ่นตะแกรงย่างให้ได้อุ่นหมุมที่ต้องการ โดยกดปุ่ม ย่าง (🍷) และกำหนดเวลาในการอุ่นโดยกดปุ่ม (—) และ (+)

🍷 ระบบย่าง Grill — +

2. กดปุ่ม 

 เริ่มต้น /+ 30 วินาที Start / +30 sec

3. เปิดประตูเตาอบและวางภาชนะบนตะแกรง ปิดประตู



4. กดปุ่ม 🍷

ผลลัพธ์:

จะแสดงผลดังนี้:

🍷 0

🍷 ย่าง Grill

5. กำหนดเวลาในการย่างโดยกดปุ่ม (—) และ (+) เวลาสูงสุดสำหรับการย่างคือ 60 นาที

— +

6. กดปุ่ม 

ผลลัพธ์:

การย่างจะเริ่มขึ้น และเมื่อเสร็จแล้ว

- เตาอบจะส่งเสียงเตือนสี่ครั้ง
- เตาอบจะส่งสัญญาณเตือน 3 ครั้ง (นาทีละครั้ง)
- เวลาปัจจุบันจะปรากฏขึ้นอีกครั้ง

🍷 ย่าง Grill

-  โปรดอย่าตกใจถ้าตัวทำความร้อนเปิดและเปิดในขณะที่ย่างอยู่ ระบบนี้ได้รับการออกแบบมาเพื่อป้องกันความร้อนในเตาอบสูงเกินไป

-  โปรดใช้คู่มือเกี่ยวกับความร้อนทุกครั้งที่มีสัมผัสภาชนะในเตาอบ เนื่องจากภาชนะเหล่านี้จะร้อนจัด ให้หลีกเลี่ยงความร้อนอยู่ในตำแหน่งแน่นอน

การใช้ไมโครเวฟผสมการย่าง

 
คุณสามารถใช้ไมโครเวฟร่วมกับการย่าง เพื่อให้อาหารสุกเร็ว และเหลืองเกรียมในขณะเดียวกัน

 โปรดใช้ภาชนะและเครื่องครัวที่ใช้กับไมโครเวฟและเตาอบ จานแก้วหรือกระเบื้องเป็นภาชนะที่เหมาะสม เนื่องจากยอมให้ไมโครเวฟเข้าถึงอาหารได้ทั่วถึงกัน

 โปรด ใช้ถุงมือกันความร้อนทุกครั้งที่มีสัมผัสภาชนะในเตา เนื่องจากภาชนะเหล่านี้จะร้อนจัด

1. เปิดประตู


วางอาหารบนตะแกรงและตะแกรงบนจานหมุน
ปิดประตู



2. กดปุ่ม ผสม (微波+烧烤)

 
ผลลัพธ์: หน้าจอจะแสดงผลดังนี้:
 (โหมดไมโครเวฟและย่าง)
600 W (พลังงาน)



 เลือกระดับพลังงานที่เหมาะสม โดยกดปุ่ม ผสม (微波+烧烤) ซ้ำ จนกว่าจะแสดงกำลังไฟที่ต้องการ


 คุณไม่สามารถกำหนดอุณหภูมิสำหรับการย่าง


3. กำหนดเวลาในการอบอาหารโดยกดปุ่ม (—) และ (+) เวลาสูงสุดสำหรับการย่างคือ 60 นาที



4. กดปุ่ม

 ผลลัพธ์: การอบแบบผสมจะเริ่มขึ้น และเมื่อเสร็จแล้ว
1) เตาอบจะส่งเสียงเตือนสั้ครั้ง
2) เตาอบจะส่งสัญญาณเตือน 3 ครั้ง (นาทีละครั้ง)
3) เวลาปัจจุบันจะปรากฏขึ้นอีกครั้ง



 พลังงานไมโครเวฟสูงสุดสำหรับโหมดผสมไมโครเวฟและย่างคือ 600 W

การปิดเสียงเตือน

คุณสามารถปิดเสียงเตือนของเตาอบได้ตามต้องการ

1. กดปุ่ม และ พร้อมกัน

ผลลัพธ์:

- หน้าจอจะแสดงผลดังนี้

OFF

- เตาไมโครเวฟจะไม่ส่งเสียงในครั้งถัดไปที่คุณกดปุ่ม



2. ในการเปิดเสียงสัญญาณอีกครั้ง ให้กดปุ่ม และ พร้อมกันอีกครั้ง

ผลลัพธ์:

- หน้าจอจะแสดงผลดังนี้

ON

- เตาอบจะทำงานโดยมีเสียงเตือนอีกครั้ง





คู่มือสำหรับอุปกรณ์การทำอาหาร

ในการอบอาหารด้วยเตาไมโครเวฟ คลื่นไมโครเวฟจะต้องสามารถแทรกเข้าสู่อาหาร โดยไม่มีการสะท้อนหรือดูดซับโดยภาชนะ

คุณจึงควรเลือกใช้อุปกรณ์อย่างรอบคอบ คุณควรเลือกภาชนะที่มีข้อความหรือเครื่องหมายว่าใช้กับไมโครเวฟได้ ตารางต่อไปนี้แสดงอุปกรณ์การทำอาหารประเภทต่างๆ และระบุว่าสามารถใช้กับเตาไมโครเวฟได้หรือไม่ และอย่างไร

อุปกรณ์	ใช้กับไมโครเวฟได้	หมายเหตุ
ฟอยล์อะลูมิเนียม	✓ X	สามารถใช้จำนวนเล็กน้อย เพื่อป้องกันส่วนที่ไม่ต้องการให้สุกเกินไป อาจมีประกายไฟ ถ้าฟอยล์อยู่ใกล้กับผนังของเตาอบมากเกินไป หรือใช้ฟอยล์มากเกินไป
จานรอง	✓	ห้ามอุ่นให้ร้อนเกิน 8 นาที
กระเบื้องและดินเผา	✓	กระเบื้องพอร์ซเลน ดินเผา ดินเผาเคลือบ และกระเบื้องเคลือบนั้นมักจะใช้ได้ดี ยกเว้นที่มีขอบโลหะ
จานโฟมหรือกระดาษแบบใช้แล้วทิ้ง	✓	อาหารแช่แข็งบางชนิดจะบรรจุในภาชนะประเภทนี้
บรรจุภัณฑ์ของอาหารจานด่วน		
• ถ้วยโฟม	✓	สามารถใช้อุ่นอาหาร ความร้อนสูงมากๆ จะทำให้โฟมละลาย
• ถุงกระดาษหรือหนังสือพิมพ์	X	อาจติดไฟ
• กระดาษรีไซเคิลหรือขอบโลหะ	X	อาจเกิดประกายไฟ
เครื่องแก้ว		
• อุปกรณ์ไมโครเวฟอาหารที่สามารถใช้กับเตาอบ	✓	ใช้ได้ หากไม่ประดับด้วยขอบโลหะ
• เครื่องแก้วบาง	✓	สามารถใช้อุ่นอาหารหรือของเหลว แก้วที่บางมากอาจแตกหรือร้าวหากได้รับความร้อนทันที
• โถแก้ว	✓	ต้องใช้อย่างระมัดระวัง เหมาะสำหรับการอุ่นอาหารเท่านั้น

อุปกรณ์	ใช้กับไมโครเวฟได้	หมายเหตุ
โลหะ		
• จาน	X	อาจเกิดประกายหรือติดไฟ
• ลวดสำหรับมัดปากถุงแช่แข็ง	X	
กระดาษ		
• จาน ถ้วย กระดาษเช็ดปาก และกระดาษเช็ดมือ	✓	สำหรับการอบเวลานับวินาที และการอุ่นอาหาร และใช้ซับของเหลวที่มากเกินไป
• กระดาษรีไซเคิล	X	อาจเกิดประกายไฟ
พลาสติก		
• ภาชนะ	✓	โดยเฉพาะพลาสติกทนความร้อน พลาสติกชนิดอื่นอาจบิดหรือเปลี่ยนสีเมื่อโดนความร้อนสูง ห้ามใช้พลาสติกแบบเมลามีน
• ฟิล์มสำหรับปิดอาหาร	✓	สามารถใช้เก็บรักษาความชื้น ไม่ควรสัมผัสกับอาหารโดยตรง ใช้ความระมัดระวังขณะนำฟิล์มออก เนื่องจากอาจมีไอร้อนออกมาด้วย
• ถุงแช่แข็ง	✓ X	เฉพาะชนิดที่ต้มได้หรือใช้กับเตาอบได้ ไม่ควรเป็นแบบกักอากาศ ซึ่งต้องใช้ส้อมเจาะก่อน ถ้าจำเป็นต้องใช้
กระดาษมันหรือกระดาษไข	✓	สามารถใช้เก็บรักษาความชื้นหรือกั้นอาหารกระเด็น

- ✓ : แนะนำ
- ✓ X : ใช้อย่างระมัดระวัง
- X : ไม่ปลอดภัย



คู่มือการอบอาหารสำหรับผักแช่แข็ง

ใช้อ่างแก้วทนไฟ (ไฟเรกซ์) ที่มีฝาปิด อบโดยปิดฝาและใช้เวลาน้อยที่สุด - โปรดดูในตาราง อบต่อไปเพื่อให้ได้ผลลัพธ์ตามต้องการ

คนอาหารสองครั้งระหว่างอบ และหนึ่งครั้งหลังการอบ เติมเกลือ เครื่องเทศ หรือเนยหลังการอบ ปิดฝาชะณะพักอาหาร

อาหาร	สัดส่วน	พลังงาน	เวลา (นาที)	เวลาพักอาหาร (นาที)	คำแนะนำ
ผักขม	150 กรัม	600 W	4½-5½	2-3	เติมน้ำเย็น 15 มล. (1 ช้อนโต๊ะ)
บรอกโคลี	300 กรัม	600 W	9-10	2-3	เติมน้ำเย็น 30 มล. (2 ช้อนโต๊ะ)
ถั่ว	300 กรัม	600 W	7½-8½	2-3	เติมน้ำเย็น 15 มล. (1 ช้อนโต๊ะ)
ถั่วเขียว	300 กรัม	600 W	8-9	2-3	เติมน้ำเย็น 30 มล. (2 ช้อนโต๊ะ)
ผักรวม (แครอท/ถั่ว/ธัญพืช)	300 กรัม	600 W	7½-8½	2-3	เติมน้ำเย็น 15 มล. (1 ช้อนโต๊ะ)
ผักรวม (แบบจีน)	300 กรัม	600 W	8-9	2-3	เติมน้ำเย็น 15 มล. (1 ช้อนโต๊ะ)

คู่มือการอบอาหารสำหรับข้าวและพาสต้า

ข้าว :

ใช้ซามแก้วไฟเรกซ์ขนาดใหญ่ที่มีฝาปิด ข้าวจะมีปริมาณเพิ่มเป็นสองเท่าเมื่อหุงสุกแล้ว อบโดยปิดฝา

เมื่อหมดเวลาอบ คนให้ทั่วก่อนพักอาหาร และเติมเกลือหรือเครื่องเทศและเนยตามต้องการ
หมายเหตุ: ข้าวอาจไม่ดูดซับน้ำทั้งหมด หลังจากทั้งหมดเวลาอบแล้ว

พาสต้า :

ใช้ซามแก้วไฟเรกซ์ขนาดใหญ่ เติมน้ำร้อน เกลือเล็กน้อย และคนให้ทั่ว อบโดยปิดฝา
คนเป็นระยะระหว่างและหลังการอบ ปิดฝาชะณะพักอาหาร และเทน้ำออกให้หมดหลังจากนั้น

อาหาร	สัดส่วน	พลังงาน	เวลา (นาที)	เวลาพักอาหาร (นาที)	คำแนะนำ
ข้าว (หุงพอสุก)	250 กรัม	850 W	16-17	5	เติมน้ำเย็น 500 มล.
ข้าวกล้อง (หุงพอสุก)	250 กรัม	850 W	21-22	5	เติมน้ำเย็น 500 มล.
ข้าวผสม (ข้าวขาว + ข้าวซ้อมมือ)	250 กรัม	850 W	17-18	5	เติมน้ำเย็น 500 มล.
ธัญพืชผสม (ข้าว + ธัญพืช)	250 กรัม	850 W	18-19	5	เติมน้ำเย็น 400 มล.
พาสต้า	250 กรัม	850 W	11-12	5	เติมน้ำร้อน 1000 มล.



คู่มือการอบอาหาร

ไมโครเวฟ

พลังงานไมโครเวฟจะแทรกซึมในอาหาร โดยจะมีการดูดซับโดยน้ำ ไขมัน และน้ำตาลในอาหาร ไมโครเวฟทำให้โมเลกุลของอาหารเคลื่อนไหวยอย่างรวดเร็ว การเคลื่อนไหวยอย่างรวดเร็วทำให้เกิดแรงเสียดทานของโมเลกุล และความร้อนจากแรงเสียดทานนี้ทำให้อาหารสุก

การอบ

ภาชนะสำหรับอบด้วยไมโครเวฟ:

ภาชนะที่ใช้จะต้องยอมให้พลังงานไมโครเวฟผ่าน เพื่อให้การอบมีประสิทธิภาพ คลื่นไมโครเวฟจะสะท้อนกับโลหะ เช่น สเตนเลส อลูมิเนียม และทองแดง แต่จะสามารถแทรกซึมผ่านดินเผา แก้ว กระเบื้อง และพลาสติก เช่นเดียวกับกระดาษและไม้ ห้ามอบอาหารในภาชนะโลหะเด็ดขาด

อาหารที่เหมาะสมสำหรับการอบด้วยไมโครเวฟ:

อาหารหลายชนิดเหมาะสำหรับการอบด้วยไมโครเวฟ เช่น ผัก ผลไม้ พาสต้า ข้าว วัตถุดิบ เนื้อ ซึ่งแช่แข็งหรือสด ซอส คัสตาร์ด ซุป พุดดิ้งอบ ของแห้งและของหมักดอง โดยทั่วไปแล้ว ไมโครเวฟเหมาะสำหรับการอบอาหารแทบทุกชนิดที่สามารถอบด้วยวิธีนี้ ตัวอย่างเช่น การละลายเนยหรือชีสออคโกแล็ต (โปรดดูเคล็ดลับ เทคนิค และคำแนะนำประกอบ)

การปิดหรือครอบอาหาร

การปิดหรือครอบอาหารระหว่างการอบเป็นสิ่งที่สำคัญ เนื่องจากน้ำจะกลายเป็นไอและมีผลต่อการอบอาหาร คุณสามารถครอบอาหารได้หลายวิธีดังนี้: เช่น ใช้จานกระเบื้อง ฝาพลาสติก หรือฟิล์มปิดอาหารที่เหมาะสมกับไมโครเวฟ

เวลาพักอาหาร

เมื่อการอบอาหารเสร็จ เวลาพักอาหารจะช่วยให้อุณหภูมิในอาหารกระจายทั่วถึงกัน

คู่มือการอบอาหารสำหรับผักสด

ใช้อ่างแก้วทนไฟ (ไฟเร็กซ์) ที่มีฝาปิด เติมน้ำเย็น 30 - 45 มล. (2-3 ช้อนโต๊ะ) สำหรับน้ำหนัก 250 กรัม นอกจากนี้คำแนะนำเป็นอย่างอื่น - โปรดดูในตาราง อบโดยปิดฝาและใช้เวลาให้น้อยที่สุด - โปรดดูในตาราง อบต่อไปเพื่อให้ได้ผลลัพธ์ตามต้องการ คนหนึ่งครั้งระหว่างและหลังการอบ เติมเกลือ เครื่องเทศ หรือเนยหลังการอบ ปิดฝาทะกักอาหารเป็นเวลา 3 นาที

คำแนะนำ: หันผักสดออกเป็นชิ้นเท่าๆ กัน ผักชิ้นเล็กจะใช้เวลาน้อยกว่า

ผักสดทุกประเภทควรอบโดยใช้พลังงานไมโครเวฟเต็มที่ (850 W)

อาหาร	สัดส่วน	เวลา (นาที)	เวลาพักอาหาร (นาที)	คำแนะนำ
บร็อคโคลี่	250 กรัม 500 กรัม	4-4½ 8-8½	3	หั่นเป็นชิ้นขนาดเท่ากัน วางส่วนก้นไว้ตรงกลาง
กะหล่ำปลีสด	250 กรัม	5½-6½	3	เติมน้ำ 60-75 มล. (5-6 ช้อนโต๊ะ)
แครอท	250 กรัม	4½-5	3	ผ่าเนแครอทเป็นชิ้นเท่าๆ กัน
ดอกกะหล่ำ	250 กรัม 500 กรัม	5-5½ 8½-9	3	หั่นเป็นชิ้นขนาดเท่ากัน หั่นแบ่งชิ้นขนาดใหญ่เป็นครึ่ง วางส่วนก้นไว้ตรงกลาง
ผักทองน้ำเต้า	250 กรัม	3½-4	3	ผ่าเนเป็นชิ้นบางๆ เติมน้ำ 30 มล. (2 ช้อนโต๊ะ) หรือเนย อบให้นุ่ม
มะเขือม่วง	250 กรัม	3½-4	3	ผ่าเนมะเขือออกเป็นชิ้นบางๆ และเติมน้ำมันมะเขือหนึ่งช้อนโต๊ะ
กระเทียม	250 กรัม	4½-5	3	หั่นเป็นชิ้นค่อนข้างหนา
เห็ด	125 กรัม 250 กรัม	1½-2 3-3½	3	เตรียมเห็ดหัวเล็กทั้งหัว หรือหัวใหญ่ผ่าเนเป็นแฉ่น อยาเติมน้ำ ให้มีน้ำมันมะเขือเล็กน้อย โรยเกลือและพริกไทย เหนือออกก่อนรับประทาน
หัวหอม	250 กรัม	5½-6	3	ผ่าเนหัวหอมเป็นแฉ่น หรือหั่นครึ่ง เติมน้ำ 15 มล. (1 ช้อนโต๊ะ)
พริกหยวก	250 กรัม	4½-5	3	หั่นเป็นชิ้นบางๆ
มันฝรั่ง	250 กรัม 500 กรัม	4-5 7½-8½	3	ซังน้ำหนักรวมมันฝรั่งที่ปอกแล้ว และหั่นครึ่งหรือสี่ส่วน เป็นชิ้นเท่าๆ กัน



อาหาร	สัดส่วน	เวลา (นาที)	เวลาพักอาหาร (นาที)	คำแนะนำ
หัวผักกาด	250 กรัม	5-5½	3	หั่นเป็นชิ้นสี่เหลี่ยมลูกเต๋าขนาดเล็ก

การอุ่น

เตาไมโครเวฟของคุณสามารถอุ่นอาหารโดยใช้เวลาเพียงเสี้ยวของการอุ่นด้วยเตาอบแบบเก่าหรือถึงใช้ระดับพลังงานและเวลาในการอุ่นตามแผนผังต่อไปนี้ เวลาในแผนผังนี้ใช้กับอาหารที่เป็นของเหลว และมีอุณหภูมิปกติคือประมาณ +18 ถึง +20°C หรืออาหารแช่เย็นที่มีอุณหภูมิ +5 ถึง +7 °C

การจับวางและการปิดครอบ

ไม่ควรอุ่นอาหารที่มีขนาดใหญ่ เช่น ก้อนเนื้อ เนื่องจากอาหารจะสุกและแห้งจนเกินไปก่อนที่ส่วนกลางจะร้อน การอุ่นอาหารที่เป็นชิ้นเล็กๆ จะได้ผลดีกว่า

ระดับพลังงานและการคน

อาหารบางอย่างสามารถอุ่นได้โดยใช้พลังงาน 850 W แต่อาหารบางอย่างควรอุ่นโดยใช้พลังงาน 600 W, 450 W หรือ 300 W

โปรดดูตารางต่อไปนี้เป็นแนวทาง โดยทั่วไป คุณควรอุ่นอาหารโดยใช้ระดับพลังงานต่ำ หากอาหารนั้นละเอียดอ่อน มีปริมาณมาก หรือถ้าเป็นอาหารชนิดที่ร้อนเร็ว (เช่น พายเนื้อสับ เป็นต้น)

คนให้ทั่ว หรือกลับด้านระหว่างการอุ่นอาหาร เพื่อให้ได้ผลดีที่สุด ถ้าเป็นไปได้ ควรคนอีกครั้งก่อนรับประทาน ใช้ความระมัดระวังเป็นพิเศษเมื่ออุ่นอาหารเหลวและอาหารสำหรับทารก เพื่อป้องกันการเดือดและกระเด็น ซึ่งอาจทำให้อาหารลวกมือ คุณควรคนอาหารก่อน ระหว่าง และหลังการอุ่น ปลดถังไอน้ำในเตาไมโครเวฟขณะพักอาหาร ขอแนะนำให้คุณใส่ช้อนพลาสติกหรือแท่งแก้วในอาหารที่เป็นของเหลว ระวีกาให้อาหารร้อนเกินไป (ซึ่งจะทำให้เสียรสชาติ) ขอแนะนำให้คุณประมาณเวลาอบให้น้อยลง และเพิ่มเวลาในการอุ่นอาหาร ถ้าจำเป็น

เวลาในการอุ่นและพักอาหาร

เมื่ออุ่นอาหารเป็นครั้งแรก คุณควรบันทึกเวลาที่ใช้ในการอุ่นไว้ เพื่อใช้ประโยชน์ในอนาคต โปรดอุ่นอาหารให้เดือดทั่วกันทุกครั้ง

พักอาหารไว้ชั่วขณะหลังจากการอุ่น เพื่อให้อุณหภูมิสม่ำเสมอทั่วกัน เวลาพักอาหารที่เหมาะสมสำหรับการอุ่นก็คือ 2 - 4 นาที นอกจากนี้แนะนำให้เป็นอย่างอื่นในแผนผัง ใช้ความระมัดระวังเป็นพิเศษเมื่ออุ่นอาหารเหลวและอาหารสำหรับทารก โปรดอ่านข้อมูลเพิ่มเติมในเรื่องข้อควรระวังเพื่อความปลอดภัย



การอุ่นของเหลว

กำหนดเวลาพักอาหารอย่างน้อย 20 วินาทีหลังจากที่ปิดเตาอบทุกครั้ง เพื่อให้มีการรับอุณหภูมิ คนอาหารระหว่างให้ความร้อนถ้าจำเป็น และคนทุกครั้งหลังจากอุ่น เพื่อป้องกันการเดือดกระเด็นและอันตรายจากน้ำร้อนลวก โปรดใช้ช้อนหรือแท่งแก้วในเครื่องต้ม และคนก่อน ระหว่าง และหลังการอุ่น

การอุ่นอาหารสำหรับทารก

อาหารสำหรับทารก: เทใส่จานกระเบื้องกันลื่น ครอบด้วยฝาพลาสติก คนให้ทั่วหลังการอุ่น พักอาหารเป็นเวลา 2-3 นาทีก่อนรับประทาน คนอีกครั้ง และตรวจสอบอุณหภูมิ อุณหภูมิที่แนะนำในการป้อน: ระหว่าง 30-40 °C

นมสำหรับทารก: เทนมในขวดแก้วที่ทำความสะอาดแล้ว อุณหภูมิไม่ควรต่ำกว่า ห้ามอุ่นขวดนมเด็กโดยปิดจุกนมไว้ เนื่องจากขวดอาจจะระเบิดเมื่อได้รับความร้อนสูง เขย่าก่อนพักอาหาร และเขย่าอีกครั้งก่อนนำไปป้อนทารก ทุกครั้ง จะต้องตรวจสอบอุณหภูมิของอาหารหรือนมสำหรับทารกก่อนที่จะนำไปป้อน อุณหภูมิที่แนะนำในการป้อน: ประมาณ 37 °C

หมายเหตุ: โปรดตรวจสอบอุณหภูมิของอาหารสำหรับทารกอย่างละเอียดก่อนที่จะนำไปป้อน เพื่อป้องกันการอาหารร้อนลวก

ใช้ระดับพลังงานและเวลาในการอุ่นตามแผนผังต่อไปนี้

การอุ่นอาหารและนมสำหรับทารก

ใช้ระดับพลังงานและเวลาในการอุ่นตามแผนผังต่อไปนี้

อาหาร	สัดส่วน	พลังงาน	เวลา	เวลาพักอาหาร (นาที)
อาหารสำหรับทารก (ผัก + เนื้อสัตว์)	190 กรัม	600 W	30 วินาที	2-3
	คำแนะนำ			
	เทใส่จานกระเบื้องกันลื่น อบโดยปิดฝา คนอาหารหลังการอบ พักอาหารเป็นเวลา 2-3 นาที คนให้ทั่วก่อนนำไปป้อน และตรวจสอบอุณหภูมิอย่างละเอียด			
โจ๊กสำหรับทารก (ข้าวฟ่าง + นม + ผลไม้)	190 กรัม	600 W	20 วินาที	2-3
	คำแนะนำ			
	เทใส่จานกระเบื้องกันลื่น อบโดยปิดฝา คนอาหารหลังการอบ พักอาหารเป็นเวลา 2-3 นาที คนให้ทั่วก่อนนำไปป้อน และตรวจสอบอุณหภูมิอย่างละเอียด			
นมสำหรับทารก	100 มล.	300 W	30-40 วินาที	2-3
	200 มล.		50 วินาทีถึง 1 นาที	
	คำแนะนำ			
	เขย่าหรือคนให้ทั่ว และเทลงในขวดแก้วที่ฆ่าเชื้อแล้ว วางตรงกลางของจานหมุน อบโดยไม่ปิดฝา คนให้ทั่วและพักอาหารอย่างน้อย 3 นาที คนให้ทั่วก่อนรับประทาน และตรวจสอบอุณหภูมิอย่างละเอียด			



การอุ่นของเหลวและอาหาร

ใช้ระดับพลังงานและเวลาในการอุ่นตามแผนผังต่อไปนี้

อาหาร	สัดส่วน	พลังงาน	เวลา (นาที)	เวลาพักอาหาร (นาที)
เครื่องต้ม กาแฟ นม ชา น้ำ (อุณหภูมิห้อง)	150 มล. (1 ถ้วย) 250 มล. (1 แก้ว)	850 W	1-1½ 1½-2	1-2
	คำแนะนำ เทเครื่องต้มใส่ถ้วยเซรามิก (150 มล.) หรือแก้ว (250 มล.) และวางไว้กึ่งกลางจานหมุน อุ่นโดยไม่ปิดฝาค่อยๆ คนก่อนและหลังจากเวลาพักอาหาร โปรดระวังขณะที่นำถ้วยออกจากเตาไมโครเวฟ (โปรดดูคำแนะนำเพื่อความปลอดภัยสำหรับการอุ่นเครื่องดื่ม)			
ซูป (เย็น)	250 กรัม	850 W	3-3½	2-3
	คำแนะนำ เทใส่จานกระเบื้องกันลื่น ครอบด้วยฝาพลาสติก คนให้ทั่วหลังการอุ่น คนอีกครั้งก่อนรับประทาน			
สลัด (เย็น)	350 กรัม	600 W	5¼-6½	2-3
	คำแนะนำ ใส่สลัดลงในจานกระเบื้องกันลื่น ครอบด้วยฝาพลาสติก คนเป็นระยะระหว่างการอุ่น และคนอีกครั้งก่อนพักอาหารและรับประทาน			
พาสต้าราดซอส (เย็น)	350 กรัม	600 W	4¼-5½	3
	คำแนะนำ ใส่พาสต้า (เช่น สปาเก็ตตี้หรือะมะนิโซ่) ในจานกระเบื้องแบน ปิดด้วยฟิล์มสำหรับไมโครเวฟ คนก่อนรับประทาน			
พาสต้ามีไส้ราดซอส (เย็น)	350 กรัม	600 W	5-6	3
	คำแนะนำ วางพาสต้าแบบมีไส้ (เช่น ราวิโอลี ทอร์ทิลลินี) ในจานกระเบื้องกันลื่น ครอบด้วยฝาพลาสติก คนเป็นระยะระหว่างการอุ่น และคนอีกครั้งก่อนพักอาหารและรับประทาน			
อาหารซูด (เย็น)	350 กรัม	600 W	5¼-6½	3
	คำแนะนำ จัดอาหารซูดซึ่งมีส่วนประกอบแช่เย็น 2-3 อย่างในจานกระเบื้อง ปิดด้วยฟิล์มสำหรับไมโครเวฟ			

การละลายน้ำแข็งแบบกำหนดเอง

ไมโครเวฟเป็นวิธีการละลายอาหารแช่แข็งที่ดียเยี่ยม เนื่องจากจะค่อยๆ ละลายอาหารแช่แข็งได้ภายในเวลาอันสั้น ซึ่งจะมีประโยชน์เป็นอย่างมาก หากมีแขกมาเยี่ยมเยียนโดยไม่ได้อเตรียมตัว ไข่แช่แข็งจะต้องได้รับการละลายน้ำแข็งทั่วทั้งตัว ก่อนที่จะสามารถนำไปอบอาหาร น้ำที่รั่วซึ่งเป็นไอน้ำและน้ำอาหารออกจากวัสดุห่อหุ้ม เพื่อให้ น้ำซึ่งจะละลายสามารถไหลออกมาจากอาหาร วางอาหารแช่แข็งในจานโดยไม่ฝาคครอบ กลับด้านหนึ่งครั้ง เทของเหลวออก และนำเครื่องในออกโดยเร็วที่สุด ตรวจสอบอาหารเป็นระยะ เพื่อให้ไม่ให้อุ่นจนเกินไป หากส่วนที่มีขนาดเล็กหรือบางของอาหารแช่แข็งเริ่มอุ่น คุณสามารถหุ้มส่วนเหล่านั้นด้วยฟอยล์อะลูมิเนียมชั้นเล็กๆ ระหว่างการละลายน้ำแข็ง ถ้าเปิดไถ่เริ่มอุ่นที่ผิวหน้า ใหหยุดละลายน้ำแข็ง เพื่อให้เป็นการพักอาหาร 20 นาที ก่อนที่จะดำเนินการต่อ พักปลา เนื้อ และไก่ไว้สักครู่ เพื่อให้ น้ำแข็งละลายทั่วทั้งกัน เวลาพักอาหารเพื่อละลายน้ำแข็งจะขึ้นอยู่กับปริมาณของอาหาร โปรดดูตารางต่อไปนี้

คำแนะนำ: อาหารที่มีลักษณะแบนจะละลายน้ำแข็งได้เร็วกว่า และปริมาณที่ไม่มากจะใช้เวลาน้อยกว่า โปรดนึกถึงคำแนะนำนี้ เมื่อแช่แข็งและละลายอาหาร

สำหรับการละลายอาหารแช่แข็งที่มีอุณหภูมิระหว่าง -18 ถึง -20 °C โปรดใช้ตารางด้านล่างเป็นแนวทาง



อาหารแช่แข็งทุกประเภทควรนำมาละลาย โดยใช้ระดับความร้อนสำหรับการละลายอาหารแช่แข็ง (180 W)

อาหาร	สัดส่วน	เวลา (นาที)	เวลาพักอาหาร (นาที)	คำแนะนำ
เนื้อ				
	เนื้อสัตว์	200 กรัม	6½-7½	วางเนื้อบนจานกระเบื้องแบบเรียบ ทุบส่วนที่แข็งด้วยฟอยล์อะลูมิเนียม กลัดด้านเมื่อถึงครึ่งของเวลาละลายน้ำแข็ง
		500 กรัม	13-14	
เนื้อหมูเป็นชิ้น	250 กรัม	7½-8½		
เปิดไก่				
	ไก่เป็นชิ้น	500 กรัม (2 ชิ้น)	14½-15½	ชั้นแรก ให้วางไก่เป็นชิ้นบนจานกระเบื้องแบบเรียบ โดยให้ด้านที่เป็นหนังอยู่ข้างล่าง ส่วนไก่ทั้งตัวให้เอาด้านหน้าอกลง ทุบส่วนที่บางและเล็ก เช่น ปีกหรือก้นด้วยฟอยล์อะลูมิเนียม กลัดด้านเมื่อถึงครึ่งของเวลาละลายน้ำแข็ง
	ไก่ทั้งตัว	900 กรัม	28-30	
ปลา				
	ชิ้นเนื้อปลา	200 กรัม (2 ชิ้น)	6-7	วางปลาแช่แข็งกลางจานกระเบื้องแบบเรียบ โดยให้ส่วนที่เล็กอยู่ใกล้ส่วนที่หนากว่า ทุบส่วนที่บางด้วยฟอยล์อะลูมิเนียม กลัดด้านเมื่อถึงครึ่งของเวลาละลายน้ำแข็ง
		400 กรัม (4 ชิ้น)	12-13	
ผลไม้				
	เบอร์รี่	250 กรัม	6-7	5-10
ขนมปัง				
	ขนมปังก้อน (ก่อนละลายประมาณ 50 กรัม)	2 ชิ้น 4 ชิ้น	½-1 2-2½	วางก้อนขนมปังเป็นวง หรือวางขนมปังแผ่นเป็นแนวนอนบนกระดาษเช็ดปากไว้กลางจานขนมปัง กลัดด้านเมื่อถึงครึ่งของเวลาละลายน้ำแข็ง
	ขนมปังแผ่นแซนด์วิช	250 กรัม	4½-5	
	ขนมปังเบอร์มิงแฮม (แบ่งสาลี+ไรย์)	500 กรัม	8-10	

ย่าง

ขดลวดสำหรับการย่างอยู่บริเวณใต้ผนังด้านบนของเตาอบ และจะทำงานเมื่อเปิดประตูและจานหมุนทำงาน การหมุนของจานหมุนจะทำให้อาหารเกรียมทั่วถึงกัน อุณหภูมิเตรียมการย่างเป็นเวลา 4 นาที เพื่อให้อาหารเกรียมเร็วขึ้น

ภาษาสำหรับการย่าง:

อุปกรณ์จะต้องไม่ติดไฟและอาจมีส่วนประกอบของโลหะได้ ห้ามใช้อุปกรณ์ที่เป็นพลาสติก เนื่องจากจะละลายได้

อาหารที่เหมาะสมสำหรับการย่าง:

เนื้อปิ้งย่าง ไล้กรอก สเต็ก แฮมเบอร์เกอร์ เบคอนและชาหมูรมควัน เนื้อปลาที่เล็บบ้างๆ แซนด์วิช และขนมปังปิ้งแบบมีที่ปิ้ง

หมายเหตุสำคัญ:

เมื่อใดก็ตามที่ใช้การย่าง โปรดตรวจสอบว่าขดลวดความร้อนอยู่ใต้ผนังด้านบนในแนวนอน ไม่ใช่ที่ผนังด้านหลังของเตาอบในแนวตั้ง โปรดทราบว่าการย่างจะต้องอยู่บนตะแกรงแบบสูง นอกจากนี้มีคำแนะนำเป็นอย่างอื่น

ไมโครเวฟ + ย่าง

การอบอาหารแบบนี้เป็นทางเลือกผสมผสานความร้อนจากขดลวดเข้ากับความเร็วของไมโครเวฟ และจะทำงานเมื่อเปิดประตูและจานหมุนทำงาน การหมุนของจานหมุนจะทำให้อาหารเหลืองเกรียมได้รวดเร็ว

คุณสามารถใช้วิธีอบอาหารร่วมกันได้สามแบบสำหรับรุ่นนี้

600 W + ย่าง, 450 W + ย่าง และ 300 W + ย่าง

อุปกรณ์สำหรับการอบอาหารด้วยไมโครเวฟ + ย่าง

โปรดใช้อุปกรณ์ที่ทนไมโครเวฟสามารถผ่านได้ และจะต้องไม่ติดไฟ โปรดอย่าใช้อุปกรณ์หรือภาชนะที่เป็นโลหะกับการทำงานแบบผสม ห้ามใช้อุปกรณ์ที่เป็นพลาสติก เนื่องจากจะละลายได้

อาหารที่เหมาะสมสำหรับการอบด้วยไมโครเวฟ + ย่าง:

อาหารที่เหมาะสมสำหรับการอบแบบผสมนี้ประกอบด้วยอาหารที่สุกแล้วทุกชนิด ซึ่งจะต้องมีการอุ่นและทำให้เหลือง (เช่น พาสต้าอบ) เช่นเดียวกับอาหารที่ต้องใช้เวลาอบไม่นาน เพื่อให้ส่วนบนเหลืองเกรียม นอกจากนี้ การทำงานแบบนี้ยังใช้กับอาหารที่มีลักษณะหนา และควรมีส่วนบนที่เกรียมกรอบ (เช่น ไก่เป็นชิ้น ซึ่งควรกลับด้านเมื่อเปิดครึ่งของระยะเวลา) โปรดดูรายละเอียดเพิ่มเติมในตารางการย่าง

หมายเหตุสำคัญ:

เมื่อใดก็ตามที่เตาอบทำงานแบบผสม (ไมโครเวฟ + ย่าง) โปรดตรวจสอบว่าขดลวดความร้อนอยู่ใต้ผนังด้านบนในแนวนอน ไม่ใช่ที่ผนังด้านหลังของเตาอบในแนวตั้ง โปรดทราบว่าการย่างจะต้องอยู่บนตะแกรงแบบสูง นอกจากนี้มีคำแนะนำเป็นอย่างอื่น ให้วางบนจานหมุนโดยตรง โปรดดูคำแนะนำในแผ่นผังต่อไปนี้ คุณจะต้องกลับอาหาร หากต้องการให้เหลืองเกรียมทั้งสองด้าน

คู่มือการย่างสำหรับอาหารสด

อุ่นเตาอบด้วยการย่างเป็นเวลา 4 นาที

ใช้ระดับพลังงานและเวลาในการย่างตามแผนผังต่อไปนี้

อาหารสด	สัดส่วน	พลังงาน	เวลาของ ด้านที่หนึ่ง (นาที)	เวลาของ ด้านที่สอง (นาที)	คำแนะนำ
ขนมปังแผ่น	4 ชิ้น (ชิ้นละ 25 กรัม)	ย่างเท่านั้น	4-5	4½-5½	วางแผ่นขนมปังคุกกันบน ตะแกรง
ขนมปังก้อน (อบแล้ว)	2-4 ชิ้น	ย่างเท่านั้น	2-3	2-3	วางขนมปังก้อนก่อนโดย เอาด้านล่างขึ้นบนเป็น วงกลมบนจานหมุน
มะเขือเทศย่าง	200 กรัม (2 ชิ้น) 400 กรัม (4 ชิ้น)	300 W + ย่าง	3¼-4½ 6-7	-	หันครึ่งมะเขือเทศ ใส่ชีสที่ ด้านบน วางเป็นรูปวงกลม บนจานแก้วไฟเร็กซ์แบบ เรียบ วางบนตะแกรง
โทสต์ข้าวสวย (สับประรด แฮม แผ่นชีส)	2 ชิ้น (300 กรัม)	450 W + ย่าง	3¼-4	-	ปิ้งขนมปังก่อน วางขนมปัง ปิ้งพร้อมท็อปปิ้งบน ตะแกรง วางขนมปัง 2 แผ่นตรงข้าม กันบนตะแกรง พักอาหาร เป็นเวลา 2-3 นาที
มันฝรั่งอบ	250 กรัม 500 กรัม	600 W + ย่าง	4½-5½ 8-9	-	หันแบ่งมันฝรั่งเป็นครึ่ง หัว วางเป็นวงบนตะแกรง โดยให้ด้านที่หันอยู่ทาง ที่จะย่าง
ไก่เป็นชิ้น	450-500 กรัม (2 ชิ้น)	300 W + ย่าง	8-9	9-10	ใช้แปรงทาหน้ามันและเครื่อง เทศให้ทั่วชิ้นไก่ วางเป็นวงโดยให้กระดูกอยู่ ตรงกลาง วางชิ้นไก่โดยไม่ต้องให้อยู่ กึ่งกลางตะแกรง พักอาหารเป็นเวลา 2-3 นาที

อาหารสด	สัดส่วน	พลังงาน	เวลาของ ด้านที่หนึ่ง (นาที)	เวลาของ ด้านที่สอง (นาที)	คำแนะนำ
แลมบ์ชอป (สุก ปานกลาง)	400 กรัม (4 ชิ้น)	ย่างเท่านั้น	11-13	8-9	ใช้แปรงทาหน้ามันและเครื่อง เทศบนเนื้อแกะ วางเป็นวง บนตะแกรง หลังจากย่างแล้ว ให้พักอาหาร 2-3 นาที
เนื้อหมูเป็นชิ้น	250 กรัม (2 ชิ้น)	ไมโครเวฟ + ย่าง	300 W + ย่าง 7-8	ย่างเท่านั้น 6-7	ใช้แปรงทาหน้ามันและเครื่อง เทศบนเนื้อหมู วางเป็นวง บนตะแกรง หลังจากย่างแล้ว ให้พักอาหาร 2-3 นาที
แอปเปิลอบ	แอปเปิล 2 ผล (ประมาณ 200 กรัม) แอปเปิล 4 ผล (ประมาณ 400 กรัม)	300 W + ย่าง	4-4½ 6-7	-	คว้านไส้แอปเปิลและขัด ด้วยลูกเกดและแยม ใส่ฮัต มอนดีผ่านบาง ๆ ไว้ด้านบน วางแอปเปิลบนจานแก้วไฟ เร็กซ์แบบเรียบ วางจานบน จานหมุน



คู่มือการย่างสำหรับอาหารแช่แข็ง

ใช้ระดับพลังงานและเวลาในการย่างตามแผนผังต่อไปนี้

อาหารสด	สัดส่วน	พลังงาน	เวลาของ ด้านที่หนึ่ง (นาที)	เวลาของ ด้านที่สอง (นาที)	คำแนะนำ
ขนมปังก้อน (ก้อนละประมาณ 50 กรัม)	2 ชิ้น 4 ชิ้น	ไมโครเวฟ + ย่าง	300 W + ย่าง 1-1½ 2-2½	ย่างอย่าง เดียว 1-2 1-2	วางเป็นวงบนตะแกรง ย่างด้าน ที่สองของก้อนขนมปังให้เหลือง ตามต้องการ พักอาหารเป็น เวลา 2-5 นาที
นากเก็ต/ขนมปัง กระเทียม	250-300 กรัม (2 ชิ้น)	450 W + ย่าง	8-9	-	วางนากเก็ตแช่แข็งในแนว ทแยงบนกระดาษอบบนตะแกรง หลังจากย่างแล้วให้พักอาหาร 2-3 นาที
กราแตง (ผักหรือมันฝรั่ง)	400 กรัม	450 W + ย่าง	13-14	-	วางกราแตงแช่แข็งในจานแก้ว ไฟเร็กซ์ วางจานบนตะแกรง พักอาหารเป็นเวลา 2-3 นาที
พาสต้า (คาเนลโลนี มักกะ โรนี ลาซซาญูกา)	400 กรัม	600 W + ย่าง	14-15	-	ใส่พาสต้าแช่แข็งในจานแก้วไฟ เร็กซ์รูปสี่เหลี่ยมผืนผ้าแบบเรียบ วางจานบนจานหมุน พักอาหาร เป็นเวลา 2-3 นาที
เนื้อไก่แช่แข็ง	250 กรัม	450 W + ย่าง	5-5½	3-3½	วางเนื้อไก่แช่แข็งบนตะแกรง
มันฝรั่งทอด สำหรับเคาบ	250 กรัม	450 W + ย่าง	9-11	4-5	วางมันฝรั่งทอดสำหรับเคาบบน กระดาษสำหรับอบบนตะแกรง

เคล็ดลับพิเศษ

การละลายเนย

ใส่เนย 50 กรัมในจานแก้วกันลิกขนาดเล็ก ครอบด้วยฝาพลาสติก

อุ่นเป็นเวลา 30-40 วินาที โดยใช้กำลังไฟ 850 W จนเนยละลาย

การละลายชีสค็อกแล็ต

ใส่ชีสค็อกแล็ต 100 กรัมในจานแก้วกันลิก

ให้ความร้อนเป็นเวลา 3-5 นาที โดยใช้พลังงาน 450 W จนชีสค็อกแล็ตละลาย

คนหนึ่งหรือสองครั้งระหว่างการละลาย ใช้ถุงมือกันความร้อนเมื่อนำออกจากเตา

การละลายผลึกน้ำแข็ง

ใส่เกล็ดน้ำแข็ง 20 กรัมในจานแก้วกันลิก

ให้ความร้อนเป็นเวลา 20-30 วินาที ใช้พลังงาน 300 W จนน้ำแข็งละลาย

การละลายเจลลาดิน

วางแผ่นเจลลาดินแห้ง (10 กรัม) ไว้ในน้ำเย็นเป็นเวลา 5 นาที

นำน้ำออก และใส่เจลลาดินในถ้วยแก้วไฟเร็กซ์ขนาดเล็ก

ให้ความร้อน 1 นาทีโดยใช้พลังงาน 300 W

คนหลังการละลาย

การอบหน้าเค้กไอซ์ซิ่ง (สำหรับเค้กและขนม)

ผสมหน้า (ประมาณ 14 กรัม) กับน้ำตาล 40 กรัมและน้ำเย็น 250 มล.

อบโดยไม่ตึงปิดฝา ในถ้วยแก้วไฟเร็กซ์ เป็นเวลา 3½ ถึง 4½ โดยใช้พลังงาน 850 W จนกระทั่งหน้าเค้กไอซ์ซิ่งใส

คนสองครั้งระหว่างการอบ

การทำแยม

ใส่ผลไม้ 600 กรัม (เช่น เบอร์รี่ชนิดต่างๆ) ในชามแก้ว ไฟเร็กซ์ที่มีขนาดเหมาะสมและมีฝาปิด เติมน้ำตาล 300 กรัม

และคนให้ทั่ว

อบโดยปิดฝาเป็นเวลา 10-12 นาที โดยใช้กำลังไฟ 850 W

คนบ่อยๆ ระหว่างการอบ เทลงในโถแก้วใสแยม ที่มีฝาปิดเกลียว พักโดยปิดฝาไว้ 5 นาที

การทำทูตติ้ง

ผสมผงทูตติ้งกับน้ำตาลและนม (500 มล.) ตามคำแนะนำของผู้ผลิต จากนั้นคนให้เข้ากัน ใช้อ่างแก้วไฟเร็กซ์ที่มีฝาปิด

อบโดยปิดฝาเป็นเวลา 6½ ถึง 7½ นาที โดยใช้พลังงาน 850 W

คนบ่อยๆ ระหว่างการอบ

การอบเมลต์อัลมอนด์แผ่น

นำเมลต์อัลมอนด์แผ่นเป็นแผ่น 30 กรัมมาใส่ในจานกระเบื้องให้เสมอกัน

คนหลายๆ ครั้งระหว่างที่เริ่มเหลืองเป็นเวลา 3½ ถึง 4½ โดยใช้ความร้อน 600 W

พักในเตาเป็นเวลาประมาณ 2-3 นาที ใช้ถุงมือกันความร้อนเมื่อนำออกจากเตา







การทำความสะอาดเตาอบไมโครเวฟของคุณ


โปรดทำความสะอาดส่วนต่อไปนี้ในเตาไมโครเวฟเป็นประจำ เพื่อไม่ให้มีไขมันและเศษอาหารเกาะ:

- ผิวหน้าด้านในและด้านนอก
- ประตูและซีลขอบประตู
- จานหมุนและวงแหวน

 **ทุกครั้งต้องตรวจสอบว่าซีลประตูสะอาดและประตูสามารถปิดได้อย่างเหมาะสม**

 การไม่รักษาความสะอาดเตาอบอาจทำให้เกิดความเสียหายกับพื้นผิว ซึ่งอาจมีผลเสียต่ออย่างมาก และอาจก่อให้เกิดอันตรายได้

1. ทำความสะอาดพื้นผิวด้านนอกด้วยผ้านุ่ม ชุบน้ำอุ่นผสมน้ำยาล้างจาน ล้างให้สะอาดและเช็ดให้แห้ง
2. จัดการอาหารที่กระเด็นบนพื้นผิวด้านในของเตาอบหรือวงแหวนด้วยผ้าชุบน้ำยาล้างจาน ล้างให้สะอาดและเช็ดให้แห้ง
3. เพื่อไม่ให้เศษอาหารที่แห้งแข็งหลุดออกง่ายขึ้น และขจัดกลิ่นไม่พึงประสงค์ ให้วางถ้วยน้ำมะนาวผสมน้ำบนจานหมุน และให้ความร้อนโดยใช้พลังงานเต็มที่เป็นเวลาสิบนาที
4. ล้างจานที่ใช้เครื่องล้างได้เมื่อใดก็ตามที่ต้องการ

 **โปรดอย่าทำน้ำหกในช่องระบาย ห้ามใช้สารขัดถูหรือสารทำลายทางเคมีเด็ดขาด โปรดใช้ความระมัดระวังขณะทำความสะอาดซีลขอบประตู เพื่อให้แน่ใจว่าไม่มีเศษอาหารติดอยู่**

- สะสม
- ทำให้ประตูปิดไม่สนิท

 **ทำความสะอาดภายในเตาอบหลังจากใช้งานทันที โดยใช้ผ้าชุบน้ำอุ่นๆ แต่โปรดรอให้เตาไมโครเวฟเย็นลงก่อนที่จะทำความสะอาด เพื่อป้องกันอันตรายที่อาจเกิดขึ้น**

การเก็บรักษาและซ่อมเตาไมโครเวฟ


โปรดทราบข้อควรระวังต่อไปนี้ เมื่อเก็บรักษาหรือนำเตาไมโครเวฟไปซ่อมแซม ห้ามใช้เตาอบ หากประตูหรือซีลขอบประตูเสียหาย

- บานพับเสียหาย
- ซีลมีความเสียหาย
- โครงภายนอกของเตาอบบิดหรืองอ

โปรดใช้บริการซ่อมบำรุงโดยช่างผู้ชำนาญการซ่อมไมโครเวฟเท่านั้น

 **ห้ามถอดโครงภายนอกของเตาอบ หากเตาไมโครเวฟทำงานไม่ถูกต้อง หรือต้องมีการบำรุงรักษา หรือหากคุณมีข้อสงสัย**

- ถอดสายไฟออกจากปลั๊กที่ผนัง
- ติดต่อศูนย์บริการหลังการขายที่อยู่อีเมล

 หากคุณต้องการเก็บเตาอบไว้ชั่วคราว โปรดเก็บไว้ในที่แห้งและไม่มีฝุ่นละออง

สาเหตุ: ฝุ่นละอองและความชื้นอาจมีผลเสียต่อส่วนประกอบของเตาอบ

 **เตาไมโครเวฟนี้ไม่เหมาะสำหรับใช้งานเพื่อการพาณิชย์**





ข้อมูลจำเพาะด้านเทคนิค

SAMSUNG มุ่งมั่นที่จะพัฒนาผลิตภัณฑ์อยู่เสมอ ดังนั้นรายละเอียดของเครื่องและคำแนะนำสำหรับผู้ใช้นี้จึงอาจมีการเปลี่ยนแปลงโดยไม่ได้แจ้งให้ทราบ

รุ่น	GE86NMD
การจ่ายไฟ	220 V ~ 50 Hz
การใช้พลังงาน ไมโครเวฟ ย่าง โหมดผสม	1300 W 1100 W 2400 W
กำลังไฟฟ้า	100 W / 850 W (IEC-705)
ความถี่ของคลื่นทำงาน	2450 MHz
แมกนีตรอน	OM75P(31)
วิธีการระบายความร้อน	มอเตอร์พัดลมระบายความร้อน
ขนาด (กว้าง x สูง x ลึก) ด้านนอก ช่องช่องเตาอบ	489 x 275 x 410 มม. 330 x 211 x 329 มม.
ปริมาตร	23 ลิตร
น้ำหนัก สุทธิ	15 กก. โดยประมาณ



ติดต่อซัมซุงเว็บไซต์ หากมีคำแนะนำหรือข้อสงสัยเกี่ยวกับผลิตภัณฑ์ซัมซุง

ติดต่อสอบถามได้ที่ SAMSUNG customer care center

โทรฟรี : 1800-29-3232

 
โทร : 02-689-3232

www.samsung.com



Microwave Oven

Owner's Instructions & Cooking Guide



This manual is made with 100% recycled paper.

imagine the possibilities

Thank you for purchasing this Samsung product.
Please register your product at

www.samsung.com/register


SAMSUNG

CONTENTS

Quick look-up guide	2
Oven	3
Control panel	4
Accessories	4
Using this instruction booklet	5
Important safety information	5
Legend for symbols and icons	5
Precaution to avoid possible exposure to excessive microwave energy. ..	5
Installing your microwave oven	9
Setting the time	9
What to do if you are in doubt or have a problem	10
Cooking/Reheating	10
Power levels	11
Stopping the cooking	11
Adjusting the cooking time	11
Using the deodorization feature	11
Using the steam cleaning	12
Using the quick meal feature	12
Quick meal settings	12
Using the Thai menu feature	13
The thai menu settings	13
Using the auto defrost feature	15
Auto defrost settings	15
Choosing the heating element position	16
Choosing the accessories	16
Grilling	16
Combining microwaves and the grill	17
Switching the beeper off	17
Cookware guide	18
Cooking guide	20
Cleaning your microwave oven	26
Storing and repairing your microwave oven	27
Technical specifications	28

QUICK LOOK-UP GUIDE

If you want to cook some food.

1. Place the food in the oven.
Select the power level by pressing the  button one or more times.



2. Set the cooking time by pressing the (—) and (+) buttons as required.

 


3. Press the  button.

Result : Cooking starts. The oven beeps four times when cooking is over.




If you want to auto Rapid defrost some food.

1. Place the frozen food in the oven.
Select the type of food that you are cooking by pressing the **Rapid deforst** () button one or more times.



 2. Select the food weight by pressing the (—) and (+) buttons.



3. Press the () button.



If you want to add extra 30 seconds.

Leave the food in the oven.
Press **+30s** one or more times for each extra 30 seconds that you wish to add.

 


If you want to grill some food.


1. Press the  button.

2. Set the cooking time by pressing the (−) and (+) buttons.

3. Press the  button



OVEN

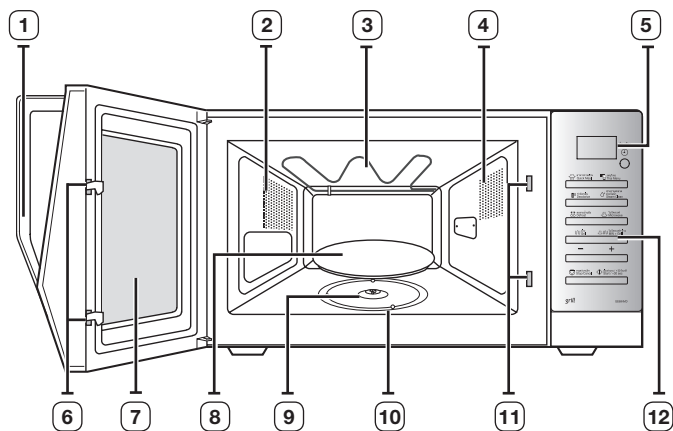

1. DOOR HANDLE

2. VENTILATION HOLES

3. GRILL

4. LIGHT

5. DISPLAY

6. DOOR LATCHES

7. DOOR

8. TURNTABLE

9. COUPLER


10. ROLLER RING

11. SAFETY INTERLOCK HOLES

12. CONTROL PANEL

ENGLISH

CONTROL PANEL

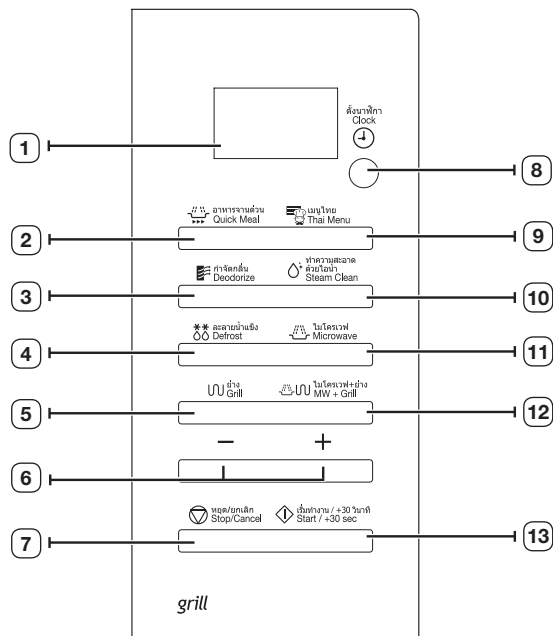

- | | |
|---|--------------------------|
| 1. DISPLAY | 8. CLOCK SETTING |
| 2. AUTO QUICK MEAL BUTTON | 9. THAI MENU BUTTON |
| 3. DEODORIZE BUTTON | 10. STEAM CLEAN BUTTON |
| 4. AUTO DEFROST BUTTON | 11. MICROWAVE BUTTON |
| 5. GRILL MODE SELECTION | 12. COMBI MODE SELECTION |
| 6. UP (+) / DOWN (-) BUTTON
(cook time, weight and serving size) | 13. START/+30 sec BUTTON |
| 7. STOP/CANCEL BUTTON | |

ACCESSORIES

Depending on the model that you have purchased, you are supplied with several accessories that can be used in a variety of ways.

- Coupler**, already placed over the motor shaft in the base of the oven.

Purpose : The coupler rotates the turntable.



 
- Roller ring**, to be placed in the centre of the oven.

Purpose : The roller ring supports the turntable.



- Turntable**, to be placed on the roller ring with the centre fitting to the coupler.

Purpose : The turntable serves as the main cooking surface; it can be easily removed for cleaning.



- Metal rack**, to be placed on the turntable.

Purpose : The metal rack can be used in grill and combination cooking.



- Clean Water Bowl** see page 12.

Purpose : The water bowl can be used to clean.



- DO NOT** operate the microwave oven without the roller ring and turntable.

USING THIS INSTRUCTION BOOKLET

You have just purchased a SAMSUNG microwave oven. Your Owner's Instructions contain valuable information on cooking with your microwave oven:

- Safety precautions
- Suitable accessories and cookware
- Useful cooking tips
- Cooking tips

IMPORTANT SAFETY INFORMATION

Important safety instructions.

READ CAREFULLY AND KEEP FOR FUTURE REFERENCE.

Before using the oven, confirm that the following instructions are followed.

- Use this appliance only for its intended purpose as described in this instruction manual. Warnings and Important Safety Instructions in this manual do not cover all possible conditions and situations that may occur. It is your responsibility to use common sense, caution, and care when installing, maintaining, and operating your appliance.
- Because these following operating instructions cover various models, the characteristics of your microwave oven may differ slightly from those described in this manual and not all warning signs may be applicable. If you have any questions or concerns, contact your nearest service centre or find help and information online at www.samsung.com.
- This microwave oven is supposed for heating food. It is intended for domestic home-use only. Do not heat any type of textiles or cushions filled with grains, which could cause burns and fire. The manufacturer cannot be held liable for damage caused by improper or incorrect use of the appliance.
- Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possible result in a hazardous situation.

LEGEND FOR SYMBOLS AND ICONS



WARNING

Hazards or unsafe practices that may result in **severe personal injury or death**.



CAUTION

Hazards or unsafe practices that may result in **minor personal injury or property damage**.



Warning; Fire hazard



Warning; Hot surface



Warning; Electricity



Warning; Explosive material



Do NOT attempt.



Follow directions explicitly.



Do NOT disassemble.



Unplug the power plug from the wall socket.



Do NOT touch.



Make sure the machine is grounded to prevent electric shock.



Call the service center for help.



Note



Important

PRECAUTION TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY.

Failure to observe the following safety precautions may result in harmful exposure to microwave energy.

- Under no circumstances should any attempt be made to operate the oven with the door open or to tamper with the safety interlocks (door latches) or to insert anything into the safety interlock holes.
- Do NOT place any object between the oven door and front face or allow food or cleaner residues to accumulate on sealing surfaces. Ensure that the door and door sealing surfaces are kept clean by wiping after use first with a damp cloth and then with a soft dry cloth.

- (c) Do NOT operate the oven if it is damaged until it has been repaired by a qualified microwave service technician trained by the manufacturer. It is particularly important that the oven door closes properly and that there is no damage to the:












- (1) Door (bent)
- (2) Door hinges (broken or loose)
- (3) Door seals and sealing surfaces








 








- (d) The oven should not be adjusted or repaired by anyone other than a properly qualified microwave service technician trained by the manufacturer.

This product is a Group 2 Class B ISM equipment. The definition of group 2 which contains all ISM equipment in which radio-frequency energy is intentionally generated and/or used in the form of electromagnetic radiation for the treatment of material, and EDM and arc welding equipment. For Class B equipment is equipment suitable for use in domestic establishments and in establishments directly connected to a low voltage power supply network which supplies buildings used for domestic purposes.

IMPORTANT SAFETY INSTRUCTIONS
















Make sure that these safety precautions are obeyed at all times.










 WARNING					
 Only qualified staff should be allowed to modify or repair the microwave oven.	✓	✓	✓	✓	✓
 Do not heat liquids and other food in sealed containers.	✓	✓	✓	✓	✓
 For your safety, do not use high-pressure water cleaners or steam jet cleaners.	✓	✓	✓	✓	✓
 Do not install this appliance; near heater, inflammable material; in a humid, oily or dusty location, in a location exposed to direct sunlight and water or where gas may leak; on un level ground.	✓	✓	✓	✓	✓
 This appliance must be properly grounded in accordance with local and national codes.	✓	✓	✓	✓	✓
 Remove all foreign substances such as dust or water from the power plug terminals and contact points using a dry cloth on a regular basis.	✓	✓	✓	✓	✓

 Do not pull or excessively bend or place heavy object on the power cord.	✓	✓	✓	✓
 In the event of a gas leak (such as propane gas, LP gas, etc.), ventilate immediately without touching the power plug.	✓	✓	✓	✓
 Do not touch the power plug with wet hands.	✓	✓	✓	✓
 Do not turn the appliance off by unplugging the power plug while an operation is in progress.	✓	✓	✓	✓
 Do not insert fingers or foreign substances, If any foreign substance such as water has entered the appliance, unplug the power plug and contact your nearest service centre.	✓	✓	✓	✓
 Do not apply excessive pressure or impact to the appliance.	✓	✓	✓	✓
 Do not place the oven over a fragile object such as a sink or glass object. (Counter top model only)	✓	✓		
 Do not use benzene, thinner, alcohol, steam cleaner or high pressure cleaner to clean the appliance.	✓	✓	✓	✓
 Ensure that the power voltage, frequency and current are the same as those of the product specifications.	✓	✓		✓
 Plug the power plug into the wall socket firmly. Do not use a multiple plug adapter, an extension cord or an electric transformer.	✓	✓	✓	
 Do not hook the power cord on a metal object, insert the power cord between the objects or behind the oven.	✓	✓	✓	
 Do not use a damaged power plug, damaged power cord or loose wall socket. When the power plug or power cord is damaged, contact your nearest service centre.	✓	✓	✓	✓
 Appliances are not intended to be operated by means of an external timer or separate remote-control system.	✓	✓		
 Do not pour or directly spray water onto the oven.	✓	✓		
 Do not place objects on the oven, inside or on the door of the oven.	✓	✓	✓	
 Do not spray volatile material such as insecticide onto the surface of the oven.	✓	✓		

★	Children should be supervised to ensure that they do not play with the appliance	✓	✓	✓	✓
□	The appliance is not intended for installing in road vehicles, caravans and similar vehicles etc.	✓	✓	✓	✓
□	Do not store flammable materials in the oven. Take special care when heating dishes or drinks that contain alcohol as alcohol vapours may contact a hot part of the oven.	✓		✓	✓
□	The microwave oven is intended to be used on the counter or counter top use only, the microwave oven shall not be placed in a cabinet. (Counter top model only)	✓	✓	✓	✓
★	WARNING: The appliance and its accessible parts become hot during use. Care should be taken to avoid touching heating elements. Children less than 8 years of age shall be kept away unless continuously supervised.	✓	✓	✓	✓
★	WARNING: Only allow children to use the oven without supervision when adequate instructions have been given so that the child is able to use the oven in a safe way and understands the hazards of improper use.	✓	✓	✓	✓
★	This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.	✓	✓	✓	✓
□	WARNING: If the door or door seals are damaged, the oven must not be operated until it has been repaired by a competent person.	✓	✓	✓	✓
□	WARNING: It is hazardous for anyone other than a competent person to carry out any service or repair operation that involves the removal of a cover which gives protection against exposure to microwave energy.	✓	✓	✓	✓
□	WARNING: Ensure that the appliance is switched off before replacing the lamp to avoid the possibility of electric shock.	✓	✓	✓	
□	WARNING: Liquids and other foods must not be heated in sealed containers since they are liable to explode.	✓		✓	✓

□	WARNING: Accessible parts may become hot during use. To avoid burns young children should be kept away.	✓		✓	
★	WARNING: Microwave heating of beverages can result in delayed eruptive boiling, therefore care must be taken when handling the container; To prevent this situation ALWAYS allow a standing time of at least 20 seconds after the oven has been switched off so that the temperature can equalize. Stir during heating, if necessary, and ALWAYS stir after heating. In the event of scalding, follow these FIRST AID instructions: <ul style="list-style-type: none"> Immerse the scalded area in cold water for at least 10 minutes. Cover with a clean, dry dressing. Do not apply any creams, oils or lotions. 	✓	✓	✓	✓
★	During use the appliance becomes hot. Care should be taken to avoid touching heating elements inside the oven.	✓		✓	✓
★	WARNING: The contents of feeding bottles and baby food jars shall be stirred or shaken and the temperature checked before consumption, in order to avoid burns;			✓	
★	The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.	✓	✓	✓	✓
★	This oven should be positioned proper direction and height permitting easy access to cavity and control area.	✓	✓	✓	✓
★	Before using the your oven first time, oven should be operated with the water during 10 minute and then used.	✓	✓	✓	✓
★	This microwave oven has to be positioned so that plug is accessible. If the oven generates a strange noise, a burning smell, or smoke is emitted, unplug the power plug immediately and contact your nearest service center.	✓	✓	✓	✓
□	during cleaning conditions the surfaces may get hotter than usual and children should be kept away (Cleaning function model only)		✓	✓	


	Excess spillage must be removed before cleaning and utensils which state in cleaning manual can be left in the oven during cleaning. (Cleaning function model only)	✓	✓	✓	✓
	Appliance should allow to disconnection of the appliance from the supply after installation. The disconnection may be achieved by having the plug accessible or by incorporating a switch in the fixed wiring in accordance with the wiring rules. (Built-in model only.)	✓	✓	✓	✓
 CAUTION					
	Only use utensils that are suitable for use in microwave ovens; DO NOT use any metallic containers, Dinnerware with gold or silver trimmings, Skewers, forks, etc. Remove wire twist ties from paper or plastic bags. Reason: Electric arcing or sparking may occur and may damage the oven.	✓		✓	✓
	When heating food in plastic or paper containers, keep an eye on the oven due to the possibility of ignition;	✓		✓	
	Do not use your microwave oven to dry papers or clothes.	✓		✓	✓
	Use shorter times for smaller amounts of food to prevent overheating and burning food.	✓		✓	✓
	If smoke is observed, switch off or unplug the appliance and keep the door closed in order to stifle any flames;	✓		✓	✓
	The oven should be cleaned regularly and any food deposits removed;	✓	✓		✓
	Do not immerse the power cable or power plug in water and keep the power cable away from heat.	✓	✓		
	Eggs in their shell and whole hard-boiled eggs should not be heated in microwave ovens since they may explode, even after microwave heating has ended; Also do not heat airtight or vacuum-sealed bottles, jars, containers, nuts in shells, tomatoes etc.			✓	✓

	Do not cover the ventilation slots with cloth or paper. They may catch fire as hot air escapes from the oven. The oven may also overheat and switch itself off automatically, and will remain off until it cools sufficiently.	✓		✓	
	Always use oven mitts when removing a dish from the oven to avoid unintentional burns.			✓	
	Do not touch heating elements or interior oven walls until the oven has cooled down.			✓	
	Stir liquids halfway during heating or after heating ends and allow the liquid stand at least 20 seconds after heating to prevent eruptive boiling.			✓	
	Stand at arms length from the oven when opening the door to avoid getting scalded by escaping hot air or steam.			✓	
	Do not operate the microwave oven when it is empty. The microwave oven will automatically shut down for 30 minutes for safety purposes. We recommend placing a glass of water inside the oven at all times to absorb microwave energy in case the microwave oven is started accidentally.	✓			✓
	Do not use harsh abrasive cleaners or sharp metal scrapers to clean the oven door glass since they can scratch the surface, which may result in shattering of the glass.	✓			✓
	Install the oven in compliance with the clearances stated in this manual (see Installing Your Microwave Oven)	✓			✓
	Take care when connecting other electrical appliances to sockets near the oven.	✓	✓	✓	


INSTALLING YOUR MICROWAVE OVEN

Place the oven on a flat level surface 85 cm above the floor. The surface should be strong enough to safely bear the weight of the oven.

1. When you install your oven, make sure there is adequate ventilation for your oven by leaving at least 10 cm (4 inches) of space behind and, on the sides of the oven and 20 cm (8 inches) of space above.

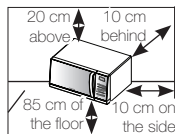

2. Remove all packing materials inside the oven. Install the roller ring and turntable. Check that the turntable rotates freely.

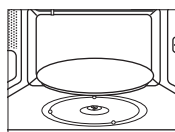

3. This microwave oven has to be positioned so that plug is accessible.

- ☐ If the supply cord is damaged, it must be replaced by a special cord or assembly available from the manufacturer or its service agent. For your personal safety, plug the cable into a 3-pin, 220 Volt, 50 Hz, AC earthed socket. If the power cable of this appliance is damaged, it must be replaced by a special cable.
- ☐ Do not install the microwave oven in hot or damp surroundings like next to a traditional oven or radiator. The power supply specifications of the oven must be respected and any extension cable used must be of the same standard as the power cable supplied with the oven. Wipe the interior and the door seal with a damp cloth before using your microwave oven for the first time.

SETTING THE TIME

Your microwave oven has an inbuilt clock. When power is supplied, “:0”, “88:88” or “12:00” is automatically displayed on the display. Please set the current time. The time can be displayed in either the 24- hour or 12-hour notation. You must set the clock:

 
- When you first install your microwave oven
- After a power failure

- ☑ Do not forget to reset the clock when you switch to and from summer and winter time.


1. To display the time in the... Then press the ⌚ button...

24-hour notation
12-hour notation


Once
Twice



 2. Press the (−) and (+) buttons to set the hour.



 
3. Press the ⌚ button.



4. Press the (−) and (+) buttons to set the minute.



 5. Press the ⌚ button.



WHAT TO DO IF YOU ARE IN DOUBT OR HAVE A PROBLEM

If you have any of the problems listed below try the solutions given.


This is normal.

- Condensation inside the oven.
- Air flow around the door and outer casing.
- Light reflection around the door and outer casing.
- Steam escaping from around the door or vents.

The oven does not start when you press the button.

- Is the door completely closed?

The food is not cooked at all.

- Have you set the timer correctly and/or pressed the  button?
- Is the door closed?
- Have you overloaded the electric circuit and caused a fuse to blow or a breaker to be triggered?

The food is either overcooked or undercooked.

- Was the appropriate cooking length set for the type of food?
- Was an appropriate power level chosen?

Sparkling and cracking occur inside the oven (arcing).

- Have you used a dish with metal trimmings?
- Have you left a fork or other metal utensil inside the oven?
- Is aluminum foil too close to the inside walls?

The oven causes interference with radios or televisions.

- Slight interference may be observed on televisions or radios when the oven is operating. This is normal. To solve this problem, install the oven away from televisions, radios and aerials.
- If interference is detected by the oven's microprocessor, the display may be reset. To solve this problem, disconnect the power plug and reconnect it. Reset the time.

 If the above guidelines do not enable you to solve the problem, contact your local dealer or SAMSUNG after-sales service.


COOKING/REHEATING

The following procedure explains how to cook or reheat food.

ALWAYS check your cooking settings before leaving the oven unattended. First, place the food in the centre of the turntable. Then, close the door.

 
1. Press the  button.

Result : The 850 W (maximum cooking power) indications are displayed:

Select the appropriate power level by pressing the  button again until the corresponding wattage is displayed. Refer to the power level table.




2. Set the cooking time by pressing the (—) and (+) buttons as required.




3. Press the  button.

Result : The oven light comes on and the turntable starts rotating.

 - 1) Cooking starts and when it has finished the oven beeps four times.
- 2) The end reminder signal will beep 3 times (once every minute).
- 3) The current time is displayed again.



 **Never** switch the microwave oven on when it is empty.

 If you wish to heat a dish for a short period of time at maximum power (850 W), simply press the **+30s** button once for each 30 seconds of cooking time. The oven starts immediately.

POWER LEVELS

You can choose among the power levels below.

Power level	Output	
	MWO	GRILL
HIGH	850 W	-
MEDIUM HIGH	600 W	-
MEDIUM	450 W	-
MEDIUM LOW	300 W	-
DEFROST (解冻)	180 W	-
LOW/KEEP WARM	100 W	-
GRILL	-	1100 W
COMBI I (烧烤)	600 W	1100 W
COMBI II (烧烤)	450 W	1100 W
COMBI III (烧烤)	300 W	1100 W


☑ If you select higher power level, the cooking time must be decreased.

 
☑ If you select lower power level, the cooking time must be increased.


STOPPING THE COOKING


You can stop cooking at any time to check the food.

1. To stop temporarily;
Open the door.


Result : Cooking stops. To resume cooking, close the door and press  again.



2. To stop completely;
Press the  button.

Result : The cooking stops. If you wish to cancel the cooking settings, press the **Stop** () button again.

 


☑ You can also cancel any setting before starting by simply pressing **Stop** ()

ADJUSTING THE COOKING TIME

You can increase the cooking time by pressing the +30s button once for each 30 seconds to be added.

Press the **+30s** button once for each 30 seconds to be added.



USING THE DEODORIZATION FEATURE

Use this feature after cooking odorous food or when there is a lot of smoke in the oven interior.

Press the **Deodorization** () button after you have finished cleaning. you will hear four beeps



☑ The deodorization time has been specified as 5 minutes. It increases by 30 seconds whenever the **+30s** button is pressed.

☑ The maximum deodorization time is 15 minutes.

 


USING THE STEAM CLEANING


The steam provided by steam clean system will soak the cavity surface. After using steam clean function, you can easily clean the cavity of oven.

-  Use this function only after the oven has completely cooled.
(Room temperature)
-  Use normal water only, and no distilled water.


1. Open the Door.



 2. Fill with water following guide line (water level) outside the water bowl. (The line is about 50 ml.)




 3. Insert water bowl into upper water bowl holder on the right wall of cooking chamber.




4. Close the door.

 
5. Press the **Steam clean** button.
It can be seen **MISTY** during steam cleaning.
but it is not a defect **BUT STEAM SHIELDS THE light INSIDE.**



 6. Open the Door.



 7. Please clean cavity of oven with dried dishtowel.
Remove the turntable and only under rack with kitchen paper.



Warning!

- Water Bowl only can be use during **"Steam Clean"** mode.
- When cooking non-liquid items, remove water bowl because it will damage and cause fire to the microwave oven.

USING THE QUICK MEAL FEATURE

With the Quick meal feature, the cooking time is set automatically. First, place the food in the centre of the turntable and close the door.

1. Press the **Quick meal** button.



2. Select the type of food that you are cooking by pressing the Quick meal button. Refer to the table on the following page for a description of the various preprogrammed settings.

 


3. Press **Start** (▶) button.

Result:

The food is cooked according to the preprogrammed setting selected.

- When cooking has finished, the oven will beep and flash "0" four times. The oven will then beep one time per minute.



QUICK MEAL SETTINGS

The following table presents the various Quick meal Programmes, quantities, standing times and appropriate recommendations.

Code	Food	Serving size	Ingredients
1	Instant noodle	670 g	Minced pork - 100 g, egg - 1, any vegetables - 100 g, instant noodle - 1 bag, boiled water - 2 cups
Recommendations			
1. Put instant noodle, minced pork, vegetable and egg together and cook.			
2	Frozen shrimp dumpling (kanom jeeb kung)	192 g (16/p)	Frozen shrimp bumping (kanom jeeb kung) - 192 g
Recommendations			
1. Cut the corner of the package and cook.			

Code	Food	Serving size	Ingredients
3	Frozen chinese bun (salapao sai moo)	180 g (30/p)	Frozen chinese bun (salapao sai moo) - 180 g
	Recommendations 1. Cut the corner of the package and cook.		
4	Frozen wonton shrimp (keaw kung)	250 g	Frozen wonton shrimp (keaw kung) - 250 g
	Recommendations 1. Remove the outer bag before reheating. 2. Pierce cover film for 3-4 time and cook.		
5	Frozen congee with grouper fish (kow tom pla kao)	350 g	Frozen congee with grouper fish (kow tom pla kao) - 350 g
	Recommendations 1. Remove the outer seal before reheating. 2. Open the cover. Add water to fill line. 3. Cover lid loosely to let steam escape during heat and cook.		
6	Frozen spaghetti with chicken sauce	450 g	Frozen spaghetti with chicken sauce - 450 g
	Recommendations 1. Remove the outer bag before reheating. 2. Pierce cover film for 3-4 time and cook.		

USING THE THAI MENU FEATURE

With the Thai menu feature, the cooking time is set automatically. First, place the food in the centre of the turntable and close the door.

1. Press the **Thai menu** button.



2. Select the type of food that you are cooking by pressing the Thai menu button. Refer to the table on the following page for a description of the various preprogrammed settings.



3. Press **Start** (↵) button.

Result:

The food is cooked according to the preprogrammed setting selected.

- When cooking has finished, the oven will beep and flash "0" four times. The oven will then beep one time per minute.



THE THAI MENU SETTINGS

The following table presents the various Thai menu Programmes, quantities, standing times and appropriate recommendations.

Code	Food	Serving size	Ingredients
1	Rice	320 g	Rice - 1 cup, water - 1¼ cup
	Recommendations 1. Put rice , water in a bowl and cover with the lid 2. Cook and keep the lid closed for another 15-20 minutes before serve		
2	Brown rice	350 g	Brown rice - 1 cup, water for cooking - 2 cups, water for cleaned rice
	Recommendations 1. Put brown rice in a bowl , add water and cover with the lid. 2. Cook and wait for 10 mins ready to serve		

Code	Food	Serving size	Ingredients
3	Sticky rice	350-400 g	Sticky rice - 1 cup, water - ½ cup
	Recommendations 1. Put the sticky rice , add water in bowl and cover with the lid 2. Cook and keep the lid closed for another 15-20 minutes before serve		
4	Pork congee/ Porridge	600-750 g	Cooked rice - 1 cup, water - 500 ml, pork chopped - ½ cup, pepper ground - 1 tbs, soy suace - 1 tbs, oyster sauce - 1 tbs, spring onion, sliced celery, coriander - ½ cup
	Recommendations 1. Mix chopped pork with pepper ,oyster sauce and make a small balls 2. Put pork balls, cooked rice, water, then seasoning with seasoning powder pork flavor, stir well and cook 3. Add the celery, spring onion, corianders before serve		
5	Spaghetti	220 g	Spaghetitis - 80 g, boiled water - 500 ml
	Recommendations 1. Add salt in water stir well , then add spaghetti and cook 2. Drain and soak in cold water. Add a bit vegetable oil and stir.		
6	Steamed egg (egg custard)	400-450 g	Fresh egg - 2, evaporated milk - 2 tbs, water - ¾ cup, japanese soy sauce - 1 tbs, salt - 1/8 tbs, kani crab - ¼ cup, boiled shrimps - 4
	Recommendations 1. Put eggs in a bowl, bleated then add evaporated milk, water and seasoning with japanese soy sauce and salt mixed well. 2. Cook and decorate with kani crab and shrimp before serve		
7	Spaghetti cream sauce	450-500 g	Onion - ¼ cup, water - ½ cup, cooked ham - ½ cup, cooked spaghetti - 80 g, salted butter - 2 tbs, bay leaves - 3, plain four - 1 tbs, whipping cream - 100 ml, sliced mushroom - ½ cup, salt, pepper - ¼ tbs, mozzarellas cheese - 2 tbs
	Recommendations 1. Mix water and flour, then add butter,whipping cream, bay leave, chopped onion, ham, sliced mustroom seasoning with salt & pepper 2. Cook and add mozzarella cheese stir then serve with spaghetti.		

Code	Food	Serving size	Ingredients
8	New orleans chicken wings	200 g	Chicken wings - 250 g, oyster sauce - 2 tbs, pepper - ½ tbs, chili sauce - 1 tbs, bay leave - 1
	Recommendations 1. Make the marinate sauce by mixing oyster sauce, bay leave, pepper, chili sauce ; then marinate with chicken wings leave for 15 mins. 2. Put its on crusty tray and cook 3. When beep is ringing, flip over and cook		
9	Grilled whole chicken	900-1000 g	Whole chicken (1 kg) - 1, sugar - ½ tbs, oyster sauce - 5 tbs, soy sauce - 3 tbs, black pepper - 1 tbs, coriander - 2 roots, garlic - 2 tbs, vegetable oil - 2 tbs, liquor - 3 tbs
	Recommendations 1. Blend garlic, black pepper, and coriander root. Seasoning with sugar, oyster sauce, soy sauce, liquor, and vegetable oil then mix together. 2. Braise the herb on the chicken and put the herb in the chicken, leave for 15-20 mins. 3. Put the marinated chicken on grill tray then cook 4. When beep is ringing, flip the chicken and cook. Take it out and serve hot with spicy dipping		

USING THE AUTO DEFROST FEATURE

The Auto Defrost feature enables you to defrost meat, poultry, fish and bread/cake. The defrost time and power level are set automatically. You simply select the programme and the weight.

 Use only dishes that are microwave-safe.

First, place the frozen food in the centre of the turntable and close the door.

1. Select the type of food that you are cooking by pressing the **Defrost** (❄️) button one or more times. (Refer to the table on the side).


❄️❄️ ละลายน้ำแข็ง
Defrost


2. Select the food weight by pressing the (—) and (+) buttons. It is possible to set up to a maximum of 1500 g.


— +

3. Press the  button.

Result :





- Defrosting begins.
- The oven beeps half way through defrosting to remind you to turn the food over.
- Press  button again to finish defrosting.


 เริ่มต้น /+ 30 วินาที
Start / +30 sec

 You can also defrost food manually. To do so, select the microwave cooking/reheating function with a power level of 180 W. Refer to the section entitled “Cooking/Reheating” on page 10 for further details.

AUTO DEFROST SETTINGS

The following table presents the various Auto Defrost programmes, quantities, standing times and appropriate recommendations. Remove all kinds of package material before defrosting. Place meat, poultry, fish and Bread Cake on a ceramic plate.


Code/ Food	Serving size	Standing time	Recommendations
1. Meat 	200-1500 g	20-90 min.	Shield the edges with aluminium foil. Turn the meat over when the oven beeps. This programme is suitable for beef, lamb, pork, steaks, chops and minced meat.
2. Poultry 	200-1500 g	20-90 min.	Shield the leg and wing tips with aluminium foil. Turn the poultry over when the oven beeps. This programme is suitable for whole chicken and chicken portions.
3. Fish 	200-1500 g	20-80 min.	Shield the tail of the whole fish with aluminium foil. Turn the fish over when the oven beeps. This programme is suitable for whole fishes and fish fillets.
4. Bread/ Cake 	125-625 g	10-60 min.	Put bread on a piece of kitchen paper and turn over, as soon as the oven beeps. Place cake on a ceramic plate and if possible, turn over, as soon as the oven beeps. (Oven keeps operating and is stopped, when you open the door. This programme is suitable for all kinds of bread, sliced or whole, as well as for bread rolls and baguettes. Arrange bread rolls in a circle. This programme is suitable for all kinds of yeast cake, biscuit, cheese cake and puff pastry. It is not, suitable for short/crust pastry, fruit and cream cakes as well as for cake with chocolate topping.

 Select the Manual Defrosting function with a power level of 180 W if you want to defrost food manually. For further details on manual defrosting and defrosting time, refer to the page 23-24.

CHOOSING THE ACCESSORIES

Use microwave-safe recipients; do not use plastic containers, dishes, paper cups, towels, etc.

 If you wish to select the combined cooking mode (grill and microwave), use only dishes that are microwave-safe and ovenproof. Metallic cookware or utensils may damage your oven.



- For further details on suitable cookware and utensils, refer to the Cookware Guide on page 18.

GRILLING

The grill enables you to heat and brown food quickly, without using microwaves. For this purpose, a grill rack is supplied with your microwave oven.

 
- Preheat the grill to the required temperature, by pressing the **Grill** (🔥) button and set the preheat time by pressing the (—) and (+) buttons.

🔥 กริลล์ - +

- Press the ⏸ button.

⏸ เริ่มต้มน /+ 30 วินาที
Start / +30 sec

- Open the door and place the food on the rack. Close the door.



- Press the 🔥 button.

Result : The following indications are displayed:



🔥 ย่าง
Grill

- Set the Grilling time by pressing the (—) and (+) buttons. The maximum grilling time is 60 minutes.

— +

- Press the ⏸ button.

Result : Grilling cooking start. When it has finished.

- The oven beeps four times.
- The end reminder signal will beep 3 times (once every minute).
- The current time is displayed again.



🔥 ย่าง
Grill

- Do not worry if the heater turns off and on while grilling. This system is designed to prevent overheating of the oven.

- Always use oven gloves when touching the dishes in the oven, as they will be very hot. Check that the heating element is in the horizontal position.

COMBINING MICROWAVES AND THE GRILL

You can also combine microwave cooking with the grill, to cook quickly and brown at the same time.

-  **ALWAYS** use microwave-safe and oven-proof cookware. Glass or ceramic dishes are ideal as they allow the microwaves to penetrate the food evenly.
-  **ALWAYS** use oven gloves when touching the recipients in the oven, as they will be very hot.


1. Open the oven door.
Place the food on the rack and the rack on the turntable.
Close the door.

2. Press the **Combi** (微波+烧烤) button.

Result : The following indications are displayed:

微波+烧烤 (microwave and grill mode)
600 W (out power)



-  Select the appropriate power level by pressing the **Combi** (微波+烧烤) button again until the corresponding power level is displayed.

-  You cannot set the temperature of the grill.

 
 
3. Set the Cooking time by pressing the (—) and (+) buttons.
The maximum grilling time is 60 minutes.

4. Press the (◀) button.

Result : Combination cooking starts. When it has finished.

- 1) The oven beeps four times.
- 2) The end reminder signal will beep 3 times (once every minute).
- 3) The current time is displayed again.

-  The maximum microwave power for the combined microwave and grill mode is 600 W.



SWITCHING THE BEEPER OFF

You can switch the beeper off whenever you want.

1. Press the (⏻) and (▶) buttons at the same time.

Result :

- The following indication is displayed.

OFF

- The oven does not beep each time you press a button.



2. To switch the beeper back on, press the (⏻) and (▶) buttons again at the same time.

Result :

- The following indication is displayed.

ON

- The oven operates with the beeper on again.



COOKWARE GUIDE

To cook food in the microwave oven, the microwaves must be able to penetrate the food, without being reflected or absorbed by the dish used. Care must therefore be taken when choosing the cookware. If the cookware is marked microwave-safe, you do not need to worry. The following table lists various types of cookware and indicates whether and how they should be used in a microwave oven.

Cookware	Microwave-Safe	Comments
Aluminum foil	✓ X	Can be used in small quantities to protect areas against overcooking. Arcing can occur if the foil is too close to the oven wall or if too much foil is used.
Crust plate	✓	Do not preheat for more than 8 minutes.
China and earthenware	✓	Porcelain, pottery, glazed earthenware and bone china are usually suitable, unless decorated with a metal trim.
Disposable polyester cardboard dishes	✓	Some frozen foods are packaged in these dishes.
Fast-food packaging		
• Polystyrene cups containers	✓	Can be used to warm food. Overheating may cause the polystyrene to melt.
• Paper bags or newspaper	X	May catch fire.
• Recycled paper or metal trims	X	May cause arcing.
Glassware		
• Oven-to-tableware	✓	Can be used, unless decorated with a metal trim.
• Fine glassware	✓	Can be used to warm foods or liquids. Delicate glass may break or crack if heated suddenly.
• Glass jars	✓	Must remove the lid. Suitable for warming only.

Cookware	Microwave-Safe	Comments
Metal		
• Dishes	X	May cause arcing or fire.
• Freezer bag twist ties	X	
Paper		
• Plates, cups, napkins and Kitchen paper	✓	For short cooking times and warming. Also to absorb excess moisture.
• Recycled paper	X	May cause arcing.
Plastic		
• Containers	✓	Particularly if heat-resistant thermoplastic. Some other plastics may warp or discolour at high temperatures. Do not use Melamine plastic.
• Cling film	✓	Can be used to retain moisture. Should not touch the food. Take care when removing the film as hot steam will escape.
• Freezer bags	✓ X	Only if boilable or oven-proof. Should not be airtight. Prick with a fork, if necessary.
Wax or grease-proof paper	✓	Can be used to retain moisture and prevent spattering.

✓ : Recommended

✓X : Use Caution

X : Unsafe

Cooking Guide for frozen vegetables

Use a suitable glass pyrex bowl with lid. Cook covered for the minimum time - see table. Continue cooking to get the result you prefer. Stir twice during cooking and once after cooking. Add salt, herbs or butter after cooking. Cover during standing time.

Food	Portion	Power	Time (min.)	Standing time (min.)	Instructions
Spinach	150 g	600 W	4½-5½	2-3	Add 15 ml (1 tablespoon) cold water.
Broccoli	300 g	600 W	9-10	2-3	Add 30 ml (2 tbsp.) cold water.
Peas	300 g	600 W	7½-8½	2-3	Add 15 ml (1 tbsp.) cold water.
Green beans	300 g	600 W	8-9	2-3	Add 30 ml (2 tbsp.) cold water.
Mixed vegetables (carrots/peas/corn)	300 g	600 W	7½-8½	2-3	Add 15 ml (1 tbsp.) cold water.
Mixed vegetables (chinese style)	300 g	600 W	8-9	2-3	Add 15 ml (1 tbsp.) cold water.

Cooking Guide for rice and pasta

Rice : Use a large glass pyrex bowl with lid - rice doubles in volume during cooking. Cook covered. After the cooking time is over, stir before standing time and salt or add herbs and butter. Remark: the rice may not have absorbed all water after the cooking time is finished.

Pasta : Use a large glass pyrex bowl. Add boiling water, a pinch of salt and stir well. Cook uncovered. Stir occasionally during and after cooking. Cover during standing time and drain thoroughly afterwards.

Food	Portion	Power	Time (min.)	Standing time (min.)	Instructions
White rice (parboiled)	250 g	850 W	16-17	5	Add 500 ml cold water.
Brown rice (parboiled)	250 g	850 W	21-22	5	Add 500 ml cold water.
Mixed rice (rice + wild rice)	250 g	850 W	17-18	5	Add 500 ml cold water.
Mixed corn (rice + grain)	250 g	850 W	18-19	5	Add 400 ml cold water.
Pasta	250 g	850 W	11-12	5	Add 1000 ml hot water.

COOKING GUIDE

MICROWAVES

Microwave energy actually penetrates food, attracted and absorbed by its water, fat and sugar content.

The microwaves cause the molecules in the food to move rapidly. The rapid movement of these molecules creates friction and the resulting heat cooks the food.

COOKING

Cookware for microwave cooking:

Cookware must allow microwave energy to pass through it for maximum efficiency. Microwaves are reflected by metal, such as stainless steel, aluminium and copper, but they can penetrate through ceramic, glass, porcelain and plastic as well as paper and wood. So food must never be cooked in metal containers.

Food suitable for microwave cooking:

Many kinds of food are suitable for microwave cooking, including fresh or frozen vegetables, fruit, pasta, rice, grains, beans, fish, and meat. Sauces, custard, soups, steamed puddings, preserves, and chutneys can also be cooked in a microwave oven. Generally speaking, microwave cooking is ideal for any food that would normally be prepared on a hob. Melting butter or chocolate, for example (see the chapter with tips, techniques and hints).

Covering during cooking

To cover the food during cooking is very important, as the evaporated water rises as steam and contributes to cooking process. Food can be covered in different ways: e.g. with a ceramic plate, plastic cover or microwave suitable cling film.

Standing times

After cooking is over food the standing time is important to allow the temperature to even out within the food.

Cooking Guide for fresh vegetables

Use a suitable glass pyrex bowl with lid. Add 30-45 ml cold water (2-3 tbsp.) for every 250 g unless another water quantity is recommended - see table. Cook covered for the minimum time - see table. Continue cooking to get the result you prefer. Stir once during and once after cooking. Add salt, herbs or butter after cooking. Cover during a standing time of 3 minutes.

Hint : Cut the fresh vegetables into even sized pieces. The smaller they are cut, the quicker they will cook.

All fresh vegetables should be cooked using full microwave power (850 W).

Food	Portion	Time (min.)	Standing time (min.)	Instructions
Broccoli	250 g 500 g	4-4½ 8-8½	3	Prepare even sized florets. Arrange the stems to the centre.
Brussels sprouts	250 g	5½-6½	3	Add 60-75 ml (5-6 tbsp.) water.
Carrots	250 g	4½-5	3	Cut carrots into even sized slices.
Cauliflower	250 g 500 g	5-5½ 8½-9	3	Prepare even sized florets. Cut big florets into halves. Arrange stems to the centre.
Courgettes	250 g	3½-4	3	Cut courgettes into slices. Add 30 ml (2 tbsp.) water or a knob of butter. Cook until just tender.
Egg plants	250 g	3½-4	3	Cut egg plants into small slices and sprinkle with 1 tablespoon lemon juice.
Leeks	250 g	4½-5	3	Cut leeks into thick slices.
Mushrooms	125 g 250 g	1½-2 3-3½	3	Prepare small whole or sliced mushrooms. Do not add any water. Sprinkle with lemon juice. Spice with salt and pepper. Drain before serving.
Onions	250 g	5½-6	3	Cut onions into slices or halves. Add only 15 ml (1 tbsp.) water.
Pepper	250 g	4½-5	3	Cut pepper into small slices.
Potatoes	250 g 500 g	4-5 7½-8½	3	Weigh the peeled potatoes and cut them into similar sized halves or quarters.
Turnip cabbage	250 g	5-5½	3	Cut turnip cabbage into small cubes.

REHEATING

Your microwave oven will reheat food in a fraction of the time that conventional ovens hobs normally take. Use the power levels and reheating times in the following chart as a guide. The times in the chart consider liquids with a room temperature of about +18 to +20 °C or a chilled food with a temperature of about +5 to +7 °C.

Arranging and covering

Avoid reheating large items such as joint of meat - they tend to overcook and dry out before the centre is piping hot. Reheating small pieces will be more successful.

Power levels and stirring

Some foods can be reheated using 850 W power while others should be reheated using 600 W, 450 W or even 300 W. Check the tables for guidance. In general, it is better to reheat food using a lower power level, if the food is delicate, in large quantities, or if it is likely to heat up very quickly (mince pies, for example). Stir well or turn food over during reheating for best results. When possible, stir again before serving. Take particular care when heating liquids and baby foods. To prevent eruptive boiling of liquids and possible scalding, stir before, during and after heating. Keep them in the microwave oven during standing time. We recommend putting a plastic spoon or glass stick into the liquids. Avoid overheating (and therefore spoiling) the food. It is preferable to underestimate cooking time and add extra heating time, if necessary.

Heating and standing times

When reheating food for the first time, it is helpful to make a note of the time taken - for future reference. Always make sure that the reheated food is piping hot throughout. Allow food to stand for a short time after reheating - to let the temperature even out. The recommended standing time after reheating is 2-4 minutes, unless another time is recommended in the chart. Take particular care when heating liquids and baby food. See also the chapter with the safety precautions.

REHEATING LIQUIDS

Always allow a standing time of at least 20 seconds after the oven has been switched off to allow the temperature to even out. Stir during heating, if necessary, and ALWAYS stir after heating. To prevent eruptive boiling and possible scalding, you should put a spoon or glass stick into the beverages and stir before, during and after heating.

REHEATING BABY FOOD

BABY FOOD: Empty into a deep ceramic plate. Cover with plastic lid. Stir well after reheating! Let stand for 2-3 minutes before serving. Stir again and check the temperature. Recommended serving temperature: between 30-40 °C.

BABY MILK: Pour milk into a sterilised glass bottle. Reheat uncovered. Never heat a baby's bottle with teat on, as the bottle may explode if overheated. Shake well before standing time and again before serving ! Always carefully check the temperature of baby milk or food before giving it to the baby. Recommended serving temperature: about 37 °C.

REMARK: Baby food particularly needs to be checked carefully before serving to prevent burns. Use the power levels and times in the next table as a guide lines for reheating.

Reheating Baby Food and Milk

Use the power levels and times in this table as guide lines for reheating.

Food	Portion	Power	Time	Standing time (min.)
Baby food (vegetables + meat)	190 g	600 W	30 sec.	2-3
	Instructions Empty into ceramic deep plate. Cook covered. Stir after cooking time. Stand for 2-3 minutes. Before serving, stir well and check the temperature carefully.			
Baby porridge (grain + milk + fruit)	190 g	600 W	20 sec.	2-3
	Instructions Empty into ceramic deep plate. Cook covered. Stir after cooking time. Stand for 2-3 minutes. Before serving, stir well and check the temperature carefully.			
Baby milk	100 ml	300 W	30-40 sec.	2-3
	200 ml		50 sec to 1 min.	
	Instructions Stir or shake well and pour into a sterilized glass bottle. Place into the centre of turn-table. Cook uncovered. Shake well and stand for at least 3 minutes. Before serving, shake well and check the temperature carefully.			

Reheating Liquids and Food

Use the power levels and times in this table as a guide lines for reheating.

Food	Portion	Power	Time (min.)	Standing time (min.)
Drinks coffee, milk, tea, water (room temperature)	150 ml (1 cup) 250 ml (1 mug)	850 W	1-1½ 1½-2	1-2
	Instructions Pour into a ceramic cup (150 ml) or mug (250 ml) and place in the centre of turntable. Reheat uncovered. Stir carefully before and after standing time. Be careful while taking the cups out (see safety instructions for liquids).			
Soup (chilled)	250 g	850 W	3-3½	2-3
	Instructions Pour into a deep ceramic plate. Cover with plastic lid. Stir well after reheating. Stir again before serving.			
Stew (chilled)	350 g	600 W	5½-6½	2-3
	Instructions Put stew in a deep ceramic plate. Cover with plastic lid. Stir occasionally during reheating and again before standing and serving.			
Pasta with sauce (chilled)	350 g	600 W	4½-5½	3
	Instructions Put pasta (e.g. spaghetti or egg noodles) on a flat ceramic plate. Cover with microwave cling film. Stir before serving.			
Filled pasta with sauce (chilled)	350 g	600 W	5-6	3
	Instructions Put filled pasta (e.g. ravioli, tortellini) in a deep ceramic plate. Cover with plastic lid. Stir occasionally during reheating and again before standing and serving.			
Plated meal (chilled)	350 g	600 W	5½-6½	3
	Instructions Plate a meal of 2-3 chilled components on a ceramic dish. Cover with microwave cling-film.			

MANUAL DEFROSTING

Microwaves are an excellent way of defrosting frozen food. Microwaves gently defrost frozen food in a short period of time. This can be of great advantage, if unexpected guests suddenly show up.

Frozen poultry must be thoroughly thawed before cooking. Remove any metal ties and take it out of any wrapping to allow thawed liquid to drain away.

Put the frozen food on a dish without cover. Turn over half way, drain off any liquid and remove any giblets as soon as possible.

Check the food occasionally to make sure that it does not feel warm.

If smaller and thinner parts of the frozen food start to warm up, they can be shield by wrapping very small strips of aluminium foil around them during defrosting.

Should poultry start to warm up on the outer surface, stop thawing and allow it to stand for 20 minutes before continuing.

Leave the fish, meat and poultry to stand in order to complete defrosting.

The standing time for complete defrosting will vary depending on the quantity defrosted. Please refer to the table below.

Hint : Flat food defrosts better than thick and smaller quantities need less time than bigger ones. Remember this hint while freezing and defrosting food.

For defrosting of frozen food with a temperature of about -18 to -20 °C, use the following table as a guide.

All frozen food should be defrosted using defrosting power level (180 W).

Food	Portion	Time (min.)	Standing time (min.)	Instructions
Meat				
Minced beef	200 g	6½-7½	15-25	Place the meat on a flat ceramic plate. Shield thinner edges with aluminium foil. Turn over after half of defrosting time!
	500 g	13-14		
Pork steaks	250 g	7½-8½		
Poultry				
Chicken pieces	500 g (2 pcs)	14½-15½	15-40	First, put chicken pieces first skin-side down, whole chicken first breast-side-down on a flat ceramic plate. Shield the thinner parts like wings and ends with aluminium foil. Turn over after half of defrosting time!
Whole chicken	900 g	28-30		
Fish				
Fish fillets	200 g (2 pcs)	6-7	5-15	Put frozen fish in the middle of a flat ceramic plate. Arrange the thinner parts under the thicker parts. Shield narrow ends with aluminium foil. Turn over after half of defrosting time!
	400 g (4 pcs)	12-13		
Fruits				
Berries	250 g	6-7	5-10	Distribute fruits on a flat, round glass dish (with a large diameter).
Bread				
Bread rolls (each about 50 g)	2 pcs	½-1	5-20	Arrange rolls in a circle or bread horizontally on kitchen paper in the middle of turntable. Turn over after half of defrosting time!
	4 pcs	2-2½		
Toast/sandwich	250 g	4½-5		
German bread (wheat + rye flour)	500 g	8-10		

GRILL

The grill-heating element is located underneath the ceiling of the cavity. It operates while the door is closed and the turntable is rotating. The turntable's rotation makes the food brown more evenly. Preheating the grill for 4 minutes will make the food brown more quickly.

Cookware for grilling:

Should be flameproof and may include metal. Do not use any type of plastic cookware, as it can melt.

Food suitable for grilling:

Chops, sausages, steaks, hamburgers, bacon and gammon rashers, thin fish portions, sandwiches and all kinds of toast with toppings.

Important remark:

Whenever the grill only mode is used, make sure that the grill-heating element is under the ceiling in the horizontal position and not on the back-wall in the vertical position. Please remember that food must be placed on the high rack, unless another instruction is recommended.

MICROWAVE + GRILL

This cooking mode combines the radiant heat that is coming from the grill with the speed of microwave cooking. It operates only while the door is closed and the turntable is rotating. Due to the rotation of the turntable, the food browns evenly.

Three combination modes are available with this model:
600 W + Grill, 450 W + Grill and 300 W + Grill.

Cookware for cooking with microwave + grill

Please use cookware that microwaves can pass through. Cookware should be flameproof. Do not use metal cookware with combination mode. Do not use any type of plastic cookware, as it can melt.

Food suitable for microwave + grill cooking:

Food suitable for combination mode cooking include all kinds of cooked food which need reheating and browning (e.g. baked pasta), as well as foods which require a short cooking time to brown the top of the food. Also, this mode can be used for thick food portions that benefit from a browned and crispy top (e.g. chicken pieces, turning them over half way through cooking). Please refer to the grill table for further details.

Important remark:

Whenever the combination mode (microwave + grill) is used, make sure that the grill heating element is under the ceiling in the horizontal position and not on the back-wall in the vertical position. The food should be placed on the high rack, unless another instruction is recommended. Otherwise it has to be placed directly on the turntable. Please refer to the instructions in the following chart.

The food must be turned over, if it is to be browned on both sides.

Grill Guide for Fresh Food

Preheat the grill with the grill-function for 4 minutes.

Use the power levels and times in this table as guide lines for grilling.

Fresh food	Portion	Power	1st side time (min.)	2nd side time (min.)	Instructions
Toast slices	4 pcs (each 25 g)	Grill only	4-5	4½-5½	Put the toast slices side by side on the rack.
Bread rolls (already baked)	2-4 pieces	Grill only	2-3	2-3	Put bread rolls first with the bottom side up in a circle directly on the turntable.
Grilled tomatoes	200 g (2 pcs) 400 g (4 pcs)	300 W + Grill	3½-4½ 6-7	-	Cut tomatoes into halves. Put some cheese on top. Arrange in a circle in a flat glass pyrex dish. Place it on the rack.
Toast hawaii (pineapple, ham, cheese slices)	2 pcs (300 g)	450 W + Grill	3½-4	-	Toast the bread slices first. Put the toast with topping on the rack. Put 2 toasts opposite directly on the rack. Stand for 2-3 minutes.
Baked potatoes	250 g 500 g	600 W + Grill	4½-5½ 8-9	-	Cut potatoes into halves. Put them in a circle on the rack with the cut side to the grill.
Chicken pieces	450-500 g (2 pcs)	300 W + Grill	8-9	9-10	Prepare chicken pieces with oil and spices. Put them in a circle with the bones to the middle. Put one chicken piece not into the centre of the rack. Stand for 2-3 minutes.
Lamb chops (medium)	400 g (4 pcs)	Grill only	11-13	8-9	Brush the lamb chops with oil and spices. Lay them in a circle on the rack. After grilling stand for 2-3 minutes.

Fresh food	Portion	Power	1st side time (min.)	2nd side time (min.)	Instructions
Pork steaks	250 g (2 pcs)	MW + Grill	300 W + Grill 7-8	Grill only 6-7	Brush the pork steaks with oil and spices. Lay them in a circle on the rack. After grilling stand for 2-3 minutes.
Baked apples	2 apple (ca. 200 g) 4 apples (ca. 400 g)	300 W + Grill	4-4½ 6-7	-	Core the apples and fill them with raisins and jam. Put some almond slices on top. Put apples on a flat glass pyrex dish. Place the dish directly on the turntable.

Grill Guide for Frozen Food

Use the power levels and times in this table as guide lines for grilling.

Fresh food	Portion	Power	1st side time (min.)	2nd side time (min.)	Instructions
Bread rolls (each about 50 g)	2 pcs 4 pcs	MW + Grill	300 W + Grill 1-1½ 2-2½	Grill only 1-2 1-2	Arrange rolls in a circle on rack. Grill the second side of the rolls up to the crisp you prefer. Stand for 2-5 minutes.
Baguettes/ garlic bread	250-300 g (2 pcs)	450 W + Grill	8-9	-	Put frozen baguette diagonally on baking paper on the rack. After grilling stand for 2-3 minutes.
Gratin (vegetables or potatoes)	400 g	450 W + Grill	13-14	-	Put frozen gratin into a small glass pyrex dish. Put the dish on the rack. After cooking stand for 2-3 minutes.
Pasta (cannelloni, macaroni, lasagne)	400 g	600 W + Grill	14-15	-	Put frozen pasta into a small flat rectangular glass pyrex dish. Put the dish directly on the turntable. After cooking stand for 2-3 minutes.
Chicken nuggets	250 g	450 W + Grill	5-5½	3-3½	Put chicken nuggets on the rack.
Oven chips	250 g	450 W + Grill	9-11	4-5	Put oven chips evenly on baking paper on the rack.

SPECIAL HINTS

MELTING BUTTER

Put 50 g butter into a small deep glass dish. Cover with plastic lid. Heat for 30-40 seconds using 850 W, until butter is melted.

MELTING CHOCOLATE

Put 100 g chocolate into a small deep glass dish. Heat for 3-5 minutes, using 450 W until chocolate is melted. Stir once or twice during melting. Use oven gloves while taking out!

MELTING CRYSTALLIZED HONEY

Put 20 g crystallized honey into a small deep glass dish. Heat for 20-30 seconds using 300 W, until honey is melted.

MELTING GELATINE

Lay dry gelatine sheets (10 g) for 5 minutes into cold water. Put drained gelatine into a small glass pyrex bowl. Heat for 1 minute using 300 W. Stir after melting.

COOKING GLAZE/ICING (FOR CAKE AND GATEAUX)

Mix instant glaze (approximately 14 g) with 40 g sugar and 250 ml cold water. Cook uncovered in a glass pyrex bowl for 3½ to 4½ minutes using 850 W, until glaze/icing is transparent. Stir twice during cooking.

COOKING JAM

Put 600 g fruits (for example mixed berries) in a suitable sized glass pyrex bowl with lid. Add 300 g preserving sugar and stir well. Cook covered for 10-12 minutes using 850 W. Stir several times during cooking. Empty directly into small jam glasses with twist-off lids. Stand on lid for 5 minutes.

COOKING PUDDING

Mix pudding powder with sugar and milk (500 ml) by following the manufacturers instructions and stir well. Use a suitable sized glass pyrex bowl with lid. Cook covered for 6½ to 7½ minutes using 850 W. Stir several times well during cooking.


BROWNING ALMOND SLICES


Spread 30 g sliced almonds evenly on a medium sized ceramic plate. Stir several times during browning for 3½ to 4½ minutes using 600 W. Let it stand for 2-3 minutes in the oven. Use oven gloves while taking out!

CLEANING YOUR MICROWAVE OVEN


The following parts of your microwave oven should be cleaned regularly to prevent grease and food particles from building up:

- Inside and outside surfaces
- Door and door seals
- Turntable and Roller rings


 **ALWAYS** ensure that the door seals are clean and the door closes properly.

 Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could adversely affect the of the appliance and possibly result in a hazardous situation.

1. Clean the outside surfaces with a soft cloth and warm, soapy water. Rinse and dry.
2. Remove any splashes or stains on the inside surfaces or on the roller ring with a soapy cloth. Rinse and dry.
3. To loosen hardened food particles and remove smells, place a cup of diluted lemon juice on the turntable and heat for ten minutes at maximum power.
4. Wash the dishwasher-safe plate whenever necessary.

 **DO NOT** spill water in the vents. **NEVER** use any abrasive products or chemical solvents. Take particular care when cleaning the door seals to ensure that no particles:

- Accumulate
- Prevent the door from closing correctly

 **Clean the** microwave oven cavity right after each use with a mild detergent solution, but let the microwave oven cool down before cleaning in order to avoid injury.


STORING AND REPAIRING YOUR MICROWAVE OVEN

A few simple precautions should be taken when storing or having your microwave oven serviced.


The oven must not be used if the door or door seals are damaged:

- Broken hinge
- Deteriorated seals
- Distorted or bent oven casing

Only a qualified microwave service technician should perform repair.

 **NEVER** remove the outer casing from the oven. If the oven is faulty and needs servicing or you are in doubt about its condition:

- Unplug it from the wall socket
- Contact the nearest after-sales service centre

 If you wish to store your oven away temporarily, choose a dry, dust-free place.

Reason : Dust and damp may adversely affect the working parts in the oven.

 This microwave oven is not intended for commercial use.

TECHNICAL SPECIFICATIONS

SAMSUNG strives to improve its products at all times. Both the design specifications and these user instructions are thus subject to change without notice.

Model	GE86NMD
Power source	220 V ~ 50 Hz
Power consumption Microwave Grill Combined mode	1300 W 1100 W 2400 W
Output power	100 W / 850 W (IEC-705)
Operating frequency	2450 MHz
Magnetron	OM75P(31)
Cooling method	Cooling fan motor
Dimensions (W x H x D) Outside Oven cavity	489 x 275 x 410 mm 330 x 211 x 329 mm
Volume	23 liter
Weight Net	15 kg approx



QUESTIONS OR COMMENTS

COUNTRY	CALL	OR VISIT US ONLINE AT
AUSTRALIA	1300-362-603	www.samsung.com
NEW ZEALAND	0800-SAMSUNG (0800-726-786)	
CHINA	400-810-5858 010-6475-1880	
HONG KONG	(852) 3698-4698	www.samsung.com/hk www.samsung.com/hk_en/
INDIA	3030-8282 1800-110011 1800-3000-8282 1800-266-8282	www.samsung.com
INDONESIA	0800-112-8888 021-5699-7777	
JAPAN	0120-327-527	
MALAYSIA	1800-88-9999	
PHILIPPINES	1-800-10-SAMSUNG (726-7864) 1-800-3-SAMSUNG (726-7864) 1-800-8-SAMSUNG (726-7864) 02-5805777	
SINGAPORE	1800-SAMSUNG(726-7864)	
THAILAND	1800-29-3232 02-689-3232	
TAIWAN	0800-329-999	
VIETNAM	1-800-588-889	

Code No.: DE68-03854C